


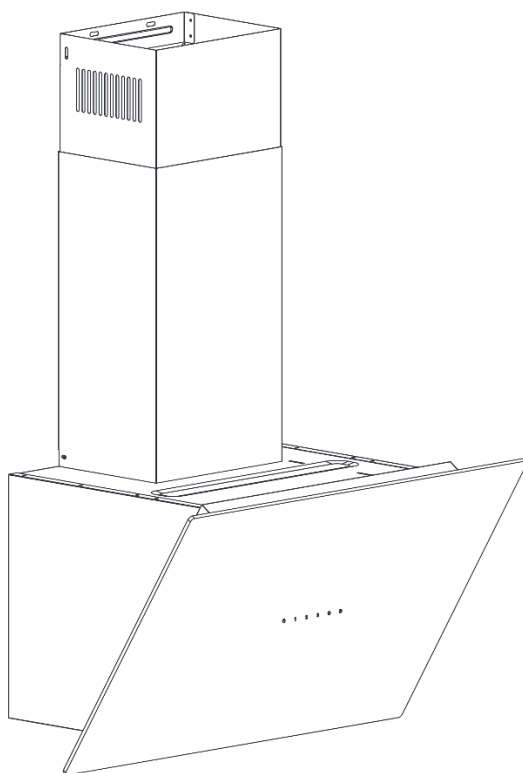

DRIFT 60 MB_80 MB



Instruction Manual EN

THANK YOU FOR CHOOSING WITT

Thank you for choosing a Witt product.

Before using your new product, please read these instructions carefully. They contain important information about safety, installation, operation and maintenance.

Keep these instructions for future reference.

CONTENTS

Safety instructions.....3

Installation dimensions5

Installation6

Operation7

Maintenance7

Troubleshooting9

Warranty and service10

SAFETY INSTRUCTIONS

- The cooker hood is intended for domestic use only and is not suitable for commercial use, e.g. in grill bars, restaurants or similar establishments.
- The cooker hood and its filters must be cleaned regularly to ensure correct operation.
- Clean the cooker hood in accordance with the instructions in this manual to avoid the risk of fire.
- Ensure adequate ventilation in the kitchen.
- Before connecting the cooker hood, check that the power cord is not damaged. If the power cord is damaged, it must only be replaced by qualified service personnel.
- There must be adequate ventilation in the room when the cooker hood is used at the same time as appliances burning gas or other fuels.
- The exhaust air must not be discharged into a flue or duct used for exhausting fumes from appliances burning gas or other fuels.
- Regulations concerning the discharge of exhaust air must be observed.
- Do not use an open flame under the cooker hood.
- The cooker hood is not intended for installation above a hob with more than four cooking zones.
- When the cooker hood and appliances supplied with energy other than electricity are in operation simultaneously, the negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar).
- **CAUTION:** Accessible parts may become hot when used with cooking appliances.
- Always disconnect the power supply before cleaning the filters or the exterior of the cooker hood, and before carrying out maintenance.
- Installation must be carried out by a qualified professional.
- The manufacturer cannot be held liable for personal injury or property damage resulting from failure to comply with the installation instructions in this manual.
- The cooker hood is designed for 220–240 V AC, 50 Hz.

RISK OF ELECTRIC SHOCK!


- Only connect the cooker hood to a properly earthed socket. If in doubt, contact a qualified electrician.
- Failure to follow these instructions may result in death, fire or electric shock.

CHILD SAFETY


- This appliance may be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge, provided that they are supervised or have been instructed in the safe use of the appliance and understand the hazards involved.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be carried out by children without supervision.

INSTALLATION NOTES




1. Before installation, ensure that the area is clean to prevent pieces of wood, dust or similar debris from being drawn into the cooker hood.
2. The cooker hood must not be connected to the same exhaust duct as other appliances, e.g. appliances burning gas or other fuels.
3. Bends in the exhaust duct must have an angle of $\geq 120^\circ$. The exhaust duct must run horizontally or upwards from the cooker hood and be vented to the outside.
4. After installation, check that the cooker hood is level to prevent grease from accumulating on one side.

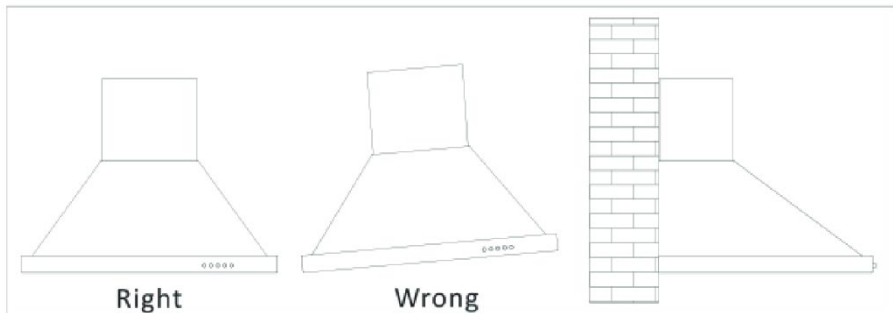

INSTALLATION DIMENSIONS

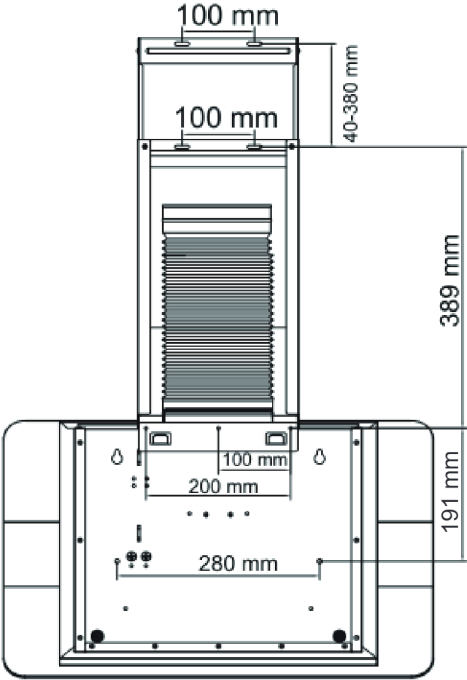


INSTALLATION BRACKETS

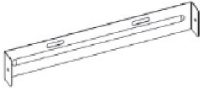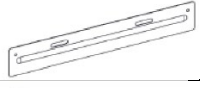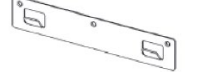
	Inner chimney holder
	Outer chimney holder
	Wall bracket

INSTALLATION



1. For optimum extraction performance, the cooker hood should be installed 65–75 cm above the hob. See Fig. 1.
2. Once the installation height has been determined, install the wall bracket and the inner chimney holder in a suitable position. Make sure they are level. Secure them to the wall with screws. See Fig. 2.
3. Attach the outer chimney holder to the outer chimney. Make sure that the inner chimney can be freely adjusted in height. Attach the exhaust duct, then install the exhaust duct and chimney on the cooker hood. See Fig. 3.
4. Hang the cooker hood on the wall bracket. See Fig. 4.
5. Secure the inner and outer chimneys to the chimney holders using 2 screws (ST4 × 8 mm) for each. Secure the housing using 2 safety screws (ST4 × 30 mm). See Fig. 5.

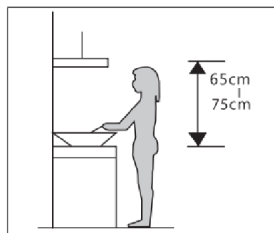


Note: The two holes for the safety screws are located on the back of the housing.

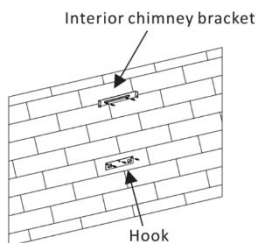

Pic 2

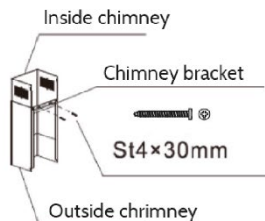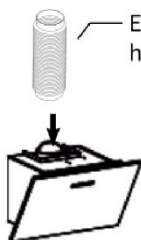


Pic 3

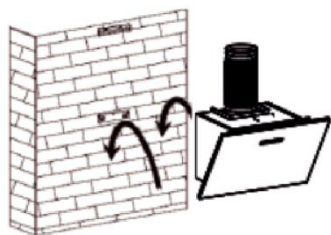

(7) Switch instruction

Pic 4

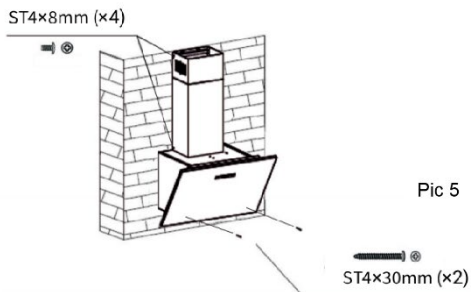

Pic 5

OPERATION

TOUCH CONTROL

 1 2 3 Boost  		
	On/Off	Press the button to turn on the cooker hood. The display lights up and the cooker hood starts at speed 1. Press the button again to turn off the cooker hood.
1	Speed	1 = speed 1 2 = speed 2 3 = speed 3. Press once more to activate Boost.
2		
3 Boost		
	Light	Press the button to turn the light on or off.
	Timer	Speed 1: 5 minutes Speed 2: 4 minutes Speed 3: 3 minutes

MAINTENANCE

CLEANING THE GREASE FILTERS

The grease filters collect grease from cooking. To ensure optimum performance of the cooker hood, the filters must be cleaned regularly.


Note: Do not use corrosive cleaning agents.

Method 1:

Soak the grease filter in clean water at 40–50 °C, add a small amount of mild detergent and leave the filter to soak for 2–3 minutes. Wear gloves and gently clean the filter with a soft brush. Avoid applying too much pressure, as the filter is delicate and can easily be damaged.

Method 2:

The grease filter can be washed in a dishwasher at a temperature of approximately 60 °C.

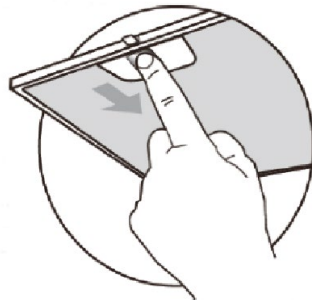

CLEANING THE COOKER HOOD

Note: Always disconnect the power supply to the cooker hood before cleaning.


- A. To protect the cooker hood housing against corrosion, clean it with warm water and a mild, non-corrosive detergent every two months.
- B. Do not use abrasive cleaning agents, as they may damage the surface.
- C. Make sure that no water enters the motor or other electrical components, as this may damage the cooker hood.
- D. Do not expose the charcoal filter to heat.

CHARCOAL FILTERS – SOLD SEPARATELY

The charcoal filter contains activated carbon, which absorbs odours from cooking. Over time, the activated carbon becomes saturated and the filter's ability to absorb odours is reduced. The charcoal filter cannot be washed or cleaned in any other way.

Under normal use, the charcoal filter should be replaced every 2–3 months. If frying or deep-frying frequently, it should be replaced more often.

1. Remove the metal grease filters.
2. The charcoal filters are located on both sides of the motor. Turn the filters until they are securely in place. See the figure below.
3. To remove the charcoal filters, follow the procedure in reverse order.

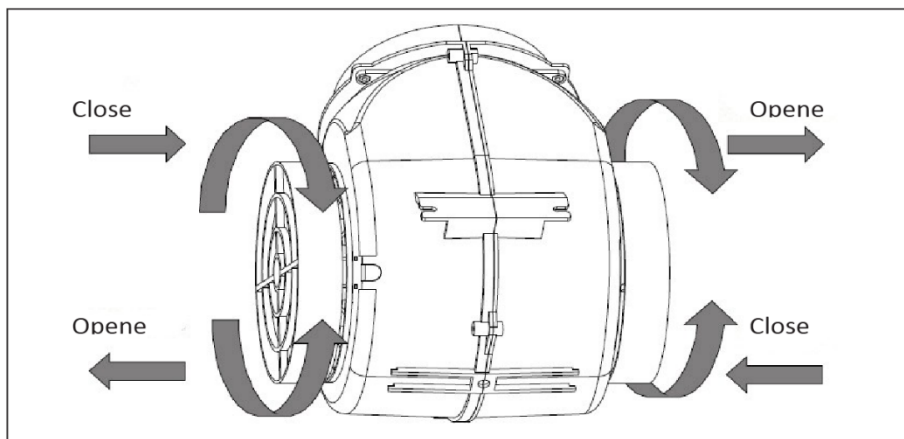

TROUBLESHOOTING

Problem	Possible cause	Possible solution
The light is on, but the motor is not running	The fan wheel is blocked.	Remove the obstruction.
	The capacitor is damaged.	Replace the capacitor.
	The motor or motor bearing is damaged.	Replace the motor.
	There is an internal motor fault or an unusual smell coming from the motor.	Replace the motor.
Neither the light nor the motor is working	The light is defective.	Replace the light.
	The power cord is loose.	Check and connect the wires according to the wiring diagram.
Grease is dripping from the metal grease filter	The grease filter is very dirty.	Clean or replace the grease filter immediately.
The cooker hood vibrates	The fan wheel is damaged.	Replace the fan wheel.
	The motor is not secured correctly.	Secure the motor correctly.
	The cooker hood housing is not secured correctly.	Secure the housing correctly.
Insufficient extraction	The distance between the cooker hood and the hob is too great.	Adjust the distance between the cooker hood and the hob.
	Open doors or windows are creating excessive air circulation.	If possible, close any doors or windows that affect the cooker hood's extraction performance.
The cooker hood is not level	The fixing screws or mounting screws are not sufficiently tightened.	Tighten the screws and make sure that the cooker hood is level.

WARRANTY AND SERVICE

The product is covered by the applicable statutory warranty rights in accordance with the Danish Sale of Goods Act. The statutory warranty covers defects in materials and workmanship that were present at the time of delivery. In Denmark, the statutory warranty period is 2 years from the date of delivery.

If you require service or support, please contact the retailer from whom the product was purchased.

When contacting the retailer, please provide the product name and serial number. This information can be found on the rating plate. You may wish to note the information in this manual for future reference. This will make it easier for the service technician to quickly identify the correct spare parts.

Serial number: _____

The manufacturer and/or distributor cannot be held liable for damage to the product or personal injury resulting from failure to comply with the safety instructions.

The statutory warranty does not cover faults or damage resulting from failure to follow the instructions in this manual.

The statutory warranty does not cover:

- Faults and damage not caused by defects in materials or workmanship
- Normal and expected wear and tear
- Damage caused by pests
- Damage resulting from the use of non-original spare parts
- Damage resulting from failure to follow the instructions in this manual
- Damage resulting from incorrect installation or assembly
- Damage resulting from repairs carried out by unauthorised persons
- Rust and discolouration caused by external factors or improper maintenance

UNJUSTIFIED SERVICE CALLS

If the product is submitted for service and it turns out that the fault could have been rectified by following the instructions in this manual, we reserve the right to charge for the service inspection.

PRODUCT SAFETY

If you believe that the product poses a safety risk (e.g. emits smoke or a burning smell, becomes unusually hot or has damaged parts upon receipt), stop using the product immediately.

For safety-related enquiries or incidents, please contact:

Witt Denmark A/S
Gødstrup Søvej 9
7400 Herning, Denmark
E-mail: safety@witt.dk

When contacting us, please provide:

- Product model
- Serial number
- Description of the problem
- Photos (if possible)

This will help us assess the situation quickly and take the necessary action.

TRANSPORT DAMAGE

If the product is damaged during transport and the damage is discovered upon delivery, this must be handled between the customer and the retailer.

If the customer has transported the product themselves, the manufacturer and/or distributor accepts no liability for any transport damage.

Visible transport damage should be reported to the retailer as soon as possible after receipt so that the damage can be documented and processed.

COMMERCIAL PURCHASES

Commercial purchases include purchases of products that are not used in private households, but for commercial purposes (e.g. restaurants, cafés, canteens), or for rental or use by multiple users.

The product is not intended for commercial use and therefore no statutory warranty rights are provided for commercial purchases.

SERVICE ENQUIRIES

All service enquiries must be directed to the retailer from whom the product was purchased.

DISPOSAL AND ENVIRONMENTAL INFORMATION



The crossed-out wheeled bin symbol indicates that the product must not be disposed of with normal household waste.

At the end of its service life, the product must be taken to an authorised recycling facility for the proper treatment of electrical and electronic equipment in accordance with applicable local and national regulations and Directive 2012/19/EU (WEEE).

Proper disposal helps prevent harmful effects on the environment and human health.

Packaging materials can be recycled and must be sorted in accordance with local waste sorting regulations.

EU DECLARATION OF CONFORMITY

This product complies with the relevant and essential requirements of applicable EU legislation.

The full EU Declaration of Conformity can be obtained from Witt Denmark A/S.

Witt Denmark A/S
Gødstrup Søvej 9
7400 Herning
Denmark
www.witt.dk