

Instruction of use EN
Induction hob with hood

WEP78FS2W

SUMMARY

SAFETY	4
PRECAUTIONS BEFORE USING	4
USING THE APPLIANCE	5
PRECAUTIONS NOT TO DAMAGE THE APPLIANCE	6
PRECAUTIONS IN CASE OF APPLIANCE FAILURE	7
OTHER PROTECTIONS	7
DESCRIPTION OF THE APPLIANCE	8
TECHNICAL CHARACTERISTICS	8
CONTROL PANEL	8
USE OF THE APPLIANCE	9
DISPLAY	9
VENTILATION	9
STARTING-UP AND APPLIANCE MANAGEMENT	9
BEFORE THE FIRST USE	9
INDUCTION PRINCIPLE	9
SENSITIVE TOUCH	9
POWER SELECTION ZONE “SLIDER” AND TIMER SETTING ZONE	10
STARTING-UP	10
PAN DETECTION	10
RESIDUAL HEAT INDICATION	11
BOOSTER AND DOUBLE BOOSTER FUNCTION	11
TIMER	11
AUTOMATIC COOKING	12
STOP&GO FUNCTION	12
RECALL FUNCTION	13
“KEEP WARM” FUNCTION	13
BRIDGE OR AUTOMATIC BRIDGE FUNCTION	13
CONTROL PANEL LOCKING	14
“CHEF” FUNCTION	14
GRILL FUNCTION	14
OPERATING THE HOOD	15
STARTING THE HOOD	15
BOOSTER FUNCTION	15
TIMER FUNCTION	15
AUTOMATIC FUNCTION	15
COOKING ADVICES	16
PAN QUALITY	16
PAN DIMENSION	16
EXAMPLES OF COOKING POWER SETTING	17
MAINTENANCE AND CLEANING OF THE HOB	17
MAINTENANCE AND CLEANING OF THE HOOD	17
FILTER CLEANING INDICATOR	17
WHAT TO DO IN CASE OF A PROBLEM	19
ENVIRONMENT PRESERVATION	20
INSTALLATION INSTRUCTIONS	21
ELECTRICAL CONNECTION	23

SAFETY

Precautions before using

- Unpack all the materials.
- The installation and connecting of the appliance have to be done by approved specialists. The manufacturer can not be responsible for damage caused by building-in or connecting errors.
- To be used, the appliance must be well-equipped and installed in a kitchen unit and an adapted and approved work surface.
- This domestic appliance is exclusively for the cooking of food, to the exclusion of any other domestic, commercial or industrial use.
- Remove all labels and self-adhesives from the ceramic glass.
- Do not change or alter the appliance.
- The cooking plate can not be used as freestanding or as working surface.
- The appliance must be grounded and connected conforming to local standards.
- Do not use any extension cable to connect it.
- The appliance can not be used above a dishwasher or a tumble-dryer: steam may damage the electronic appliances.
- The appliance is not intended to be operated by means of external timer or separate remote control system.

Using the appliance

- Switch the heating zones off after using.
- Keep an eye on the cooking using grease or oils: that may quickly ignite.
- Be careful not to burn yourself while or after using the appliance.
- Make sure no cable of any fixed or moving appliance contacts with the glass or the hot saucepan.
- Magnetically objects (credit cards, floppy disks, calculators) should not be placed near to the engaged appliance.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- In general do not place any metallic object except heating containers on the glass surface. In case of untimely engaging or residual heat, this one may heat, melt or even burn.
- Never cover the appliance with a cloth or a protection sheet. This is supposed to become very hot and catch fire.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

Precautions not to damage the appliance

- Raw pan bottoms or damaged saucepans (not enamelled cast iron pots,) may damage the ceramic glass.
- Sand or other abrasive materials may damage ceramic glass.
- Avoid dropping objects, even little ones, on the vitroceramic.
- Do not hit the edges of the glass with saucepans.
- Make sure that the ventilation of the appliance works according to the manufacturer's instructions.
- Do not put or leave empty saucepans on the vitroceramic hobs.
- Sugar, synthetic materials or aluminium sheets must not contact with the heating zones. These may cause breaks or other alterations of the vitroceramic glass by cooling: switch on the appliance and take them immediately out of the hot heating zone (be careful: do not burn yourself).
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously
- **WARNING:** Danger of fire: do not store items on the cooking surface.
- Never place any hot container over the control panel.
- If a drawer is situated under the embedded appliance, make sure the space between the content of the drawer and the inferior part of the appliance is large enough (2 cm). This is essential to guaranty a correct ventilation.
- Never put any inflammable object (ex. sprays) into the drawer situated under the vitroceramic hob. The eventual cutlery drawers must be resistant to heat.

Precautions in case of appliance failure

- If a defect is noticed, switch on the appliance and turn off the electrical supplying.
- If the ceramic glass is cracked or fissured, you must unplug the appliance and contact the after sales service.
- Repairing has to be done by specialists. Do not open the appliance by yourself.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

Other protections

- Note sure that the container pan is always centred on the cooking zone. The bottom of the pan must have to cover as much as possible the cooking zone.
- For the users of pacemaker, the magnetic field could influence its operating. We recommend getting information to the retailer or of the doctor.
- Do not to use aluminium or synthetic material containers: they could melt on still hot cooking zones.
- **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.



THE USE OF EITHER POOR QUALITY POT OR ANY INDUCTION ADAPTOR PLATE FOR NON-MAGNETIC COOKWARE RESULTS IN A WARRANTY BREACH. IN THIS CASE, THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR ANY DAMAGE CAUSED TO THE HOB AND/OR ITS ENVIRONMENT.



DESCRIPTION OF THE APPLIANCE


Technical characteristics

Type	WEP78FS2W
Total power	7400 W
Energy consumption for the hob EC_{hob}^{**}	180.5 Wh/kg
Front left heating zone	210x190 mm
Minimum detection	Ø 110 mm
Nominal power*	2100 W
Booster power*	2500/3000 W
Standardised cookware category**	B
Energy consumption EC_{cw}^{**}	188 Wh/kg
Rear left heating zone	210x190 mm
Minimum detection	Ø 110 mm
Nominal power*	2100 W
Booster power*	2500/3000 W
Standardised cookware category**	B
Energy consumption EC_{cw}^{**}	188 Wh/kg
Rear right heating zone	210x190 mm
Minimum detection	Ø 110 mm
Nominal power*	2100 W
Booster power*	2500/3000 W
Standardised cookware category**	A
Energy consumption EC_{cw}^{**}	186.4 Wh/kg
Front right heating zone	210x190 mm
Minimum detection	Ø 110 mm
Nominal power*	2100 W
Booster power*	2500/3000 W
Standardised cookware category**	C
Energy consumption EC_{cw}^{**}	159.5 Wh/kg

* The given power may change according to the dimensions and material of the pan.

**Calculated according to the method of measuring performance (EN 60350-2).

Control panel

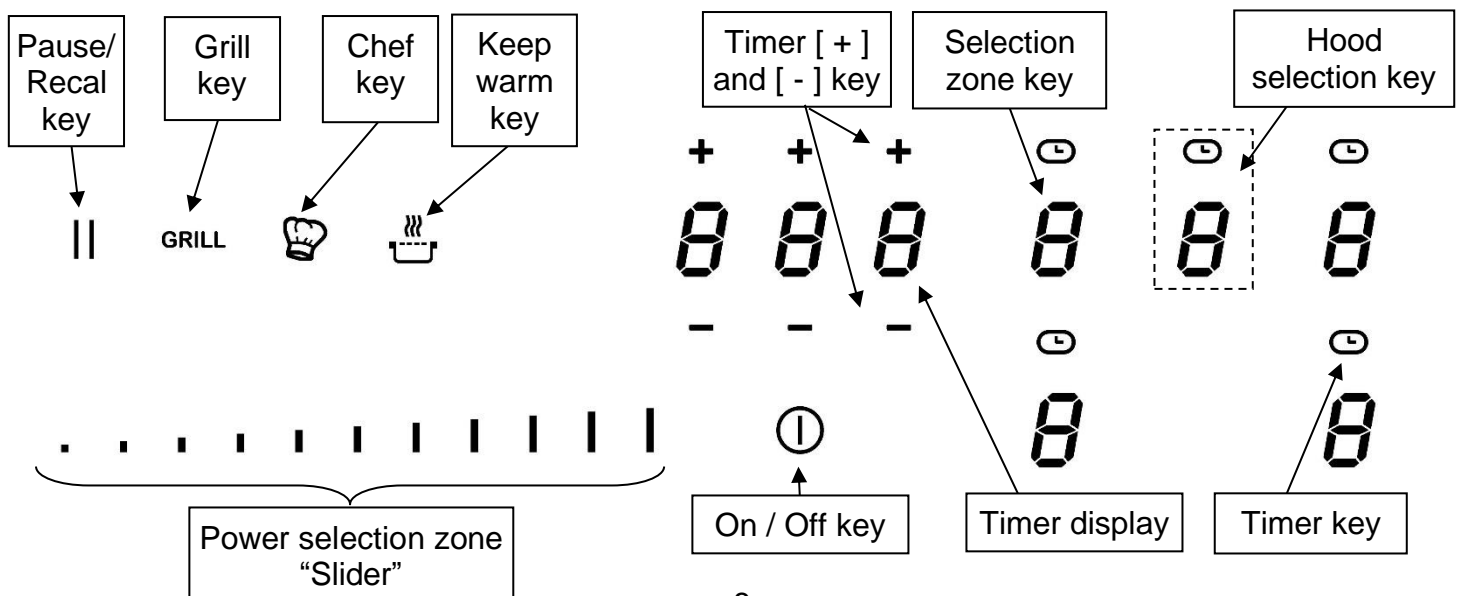

USE OF THE APPLIANCE

Display

<u>Display</u>	<u>Designation</u>	<u>Description</u>
0	Zero	The heating zone is activated.
1...9	Power level	Selection of the cooking level.
<u>U</u>	No pan detection	No pan or inadequate pan.
A	Heat accelerator	Automatic cooking.
E	Error message	Electronic failure.
H	Residual heat	The heating zone is hot.
P	Booster	The Booster is activated.
„ II	Double Booster	The Double Booster is activated.
U	Keep warm	Maintain automatically of 70°C.
II	Stop&Go	The hob is in pause.
<u>II</u>	Bridge	2 cooking zones are combined.
<u>E</u>	Grill Function	The Grill Function is activated.
L	Locking	The cooktop is locked.

Ventilation

The cooling system is fully automatic. The cooling fan starts with a low speed when the calories brought out by the electronic system reach a certain level. The ventilation starts his high speed when the hob is intensively used. The cooling fan reduces his speed and stops automatically when the electronic circuit is cooled enough.

STARTING-UP AND APPLIANCE MANAGEMENT

Before the first use

Clean your hob with a damp cloth, and then dry the surface thoroughly. Do not use detergent which risks causing blue-tinted colour on the glass surface.

Induction principle

An induction coil is located under each heating zone. When it is engaged, it produces a variable electromagnetic field which produces inductive currents in the ferromagnetic bottom plate of the pan. The result is a heating-up of the pan located on the heating zone.

Of course the pan has to be adapted:

- All ferromagnetic pans are recommended (please verify it thanks a little magnet): cast iron and steel pans, enamelled pans, stainless-steel pans with ferromagnetic bottoms...
- Are excluded: copper, pure stainless-steel, aluminium, glass, wood, ceramic, stoneware,...

The induction heating zone adapts automatically the size of the pan. With a too small diameter the pan doesn't work. This diameter is varying in function of the heating zone diameter.

If the pan is not adapted to the induction hob the display will show [U].


Sensitive touch

Your ceramic hob is equipped with electronic controls with sensitive touch keys. When your finger presses the key, the corresponding command is activated. This activation is validated by a control light, a letter or a number in the display and/or a "beep" sound.

In the case of a general use press only one key at the same time.



Power selection zone “SLIDER” and timer setting zone

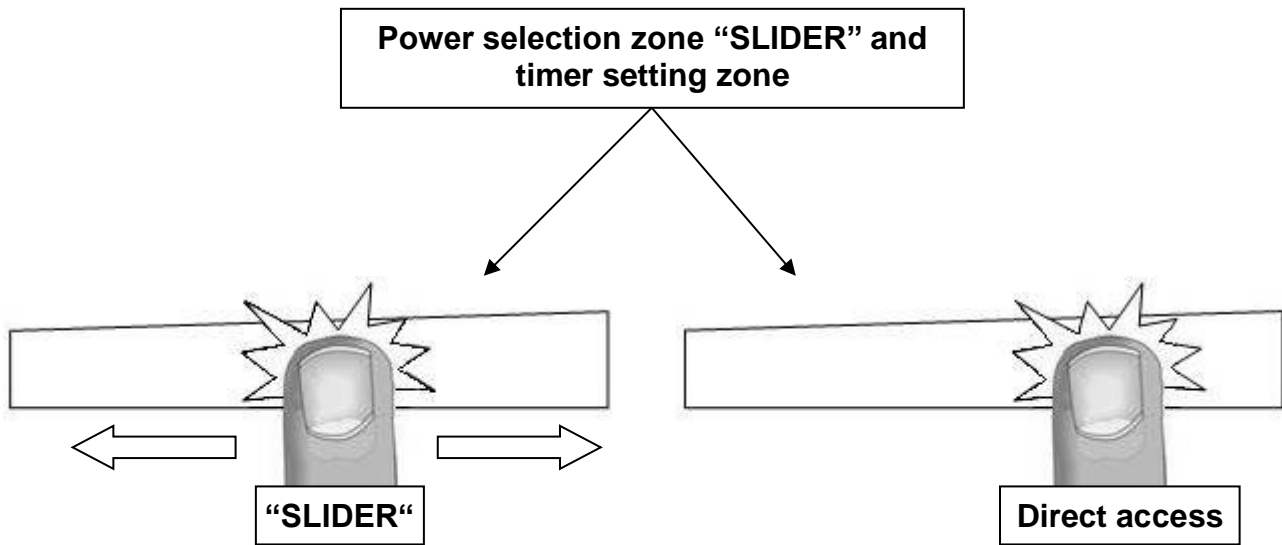To select the power with the slider, slide your finger on the “SLIDER” zone. You can already have a direct access if you put your finger directly on the chosen level.



Starting-up

- **Start up / switch off the hob:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
To start	Press key [] for 2 sec.	[0]
To stop	Press key [] for 2 sec.	Nothing or [H]




- **Start up / switch off a heating zone:**


<u>Action</u>	<u>Control panel</u>	<u>Display</u>
To set (adjust the power)	Slide on the “SLIDER” to the right or to the left	[1] to [P]
To stop	Slide to [0] on “SLIDER”	[0] or [H]

If no action is made within 20 seconds the electronics returns in waiting position.

Pan detection

The pan detection ensures a perfect safety. The induction doesn't work:

- If there is no pan on the heating zone or if this pan is not adapted to the induction. In this case it is impossible to increase the power and the display shows []. This symbol disappears when a pan is put on the heating zone.
- If the pan is removed from the heating zone the operation is stopped. The display shows []. The symbol [] disappears when the pan is put back to the heating zone. The cooking continues with the power level set before.

After use, switch the heat element off: don't let the pan detection [] active.

Residual heat indication

After the switch off of a heating zone or the complete stop of the hob, the heating zones are still hot and indicates [H] on the display.

The symbol [H] disappears when the heating zones may be touched without danger.

As far as the residual heat indicators are on light, don't touch the heating zones and don't put any heat sensitive object on them. **There are risks of burn and fire.**

Booster and double booster function

Booster [P] and Double Booster [,, !!] grant a boost of Power to the selected heating zone. If this function is activated the heating zones work during 5 minutes with an ultra-high Power. This is foreseen for example to heat up rapidly big quantities of water, like noodles.

- **Start-up / Stop the Booster:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Start up the Booster	Slide to the end of the "SLIDER" or press directly on the end of the "SLIDER"	[P]
Stop the Booster	Slide on the "SLIDER"	[9] to [0]

- **Start-up / Stop Double Booster**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Start up the Booster	Slide to the end of the "SLIDER" or press directly on the end of the "SLIDER"	[P]
Start-up Double Booster	Re-press on the end of the "SLIDER"	[,, !!] and P]
Stop the Double Booster	Slide on the "SLIDER"	[P] to [0]
Stop booster	Slide on the "SLIDER"	[9] to [0]

- **Power management:**

The total cooking hob is equipped with an overall maximum of Booster power. When the Booster function is activated, the electronic system automatically regulates all "Boosters" selected to equalise the available power to each element selected for booster. The display is blinking on [9] for a few seconds and then shows the maximum of power allowed :

<u>Heating zone selected</u>	<u>The other heating zone: (example: power level 9)</u>
[P] is displayed	[9] goes to [8] and blinks

Timer

The timer is able to be used simultaneous with all heating zones and this with different time settings from 1 minute to 1 hour and 59 minutes (displayed [1.59]) for each heating zone.


- **Setting and modification of the cooking time:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Select a zone	Press a zone	[0]
Select the power level	Slide on the "SLIDER"	[1] to [P]
Select the Timer	Press key [⏻]	Timer displays [0.00]
Increase the time	Press key [+] from the timer	[0.50]
Decrease the time	Press key [-] from the timer	Time in Min. decrease

After a few seconds, the [⏻] display stops with blinking.

The time is confirmed, and the timer starts.


- **To stop the cooking time:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Select the Timer	Press key []	Timer displays [0.50]
Stop the time	Press key [-] to [0.00]	[0.00]

If several timers are activated, repeat the process.

- **Egg timer function:**

Egg timer is an independent function. It stops as soon as a heating zone starts up. If the egg timer is on and the hob is switched off, the timer continues until time runs out.

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the hob	Press key [] for 2 sec.	[0]
Select the Timer	Press [000]	[0.00]
Increase the time	Press key [+] from the timer	[0.50]
Decrease the time	Press key [-] from the timer	Time in Min. decrease

After a few seconds, the display stops with blinking. The time is confirmed, and the timer starts.

- **Automatic stop at the end of the cooking time:**

As soon as the selected cooking time is finished the timer displays blinking [000] and a sound rings.

To stop the sound and the blinking, press the display [000].

Automatic cooking

All the cooking zones are equipped with an automatic cooking device. The cooking zone starts at full power during a certain time, and then reduces automatically its power on the pre-selected level.

- **Start-up:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Power level selection (for example « 7 »)	Slide on the “SLIDER“ to [7] and stay 3 sec.	[7] is blinking with [A]

- **Switching off the automatic cooking:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Power level selection	Slide on the “SLIDER“	[0] to [9]

Stop&Go function

This function brakes all the hob's cooking activity temporarily and allows restarting with the same settings.

- **Start up/stop the pause function:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Engage pause	Press [II] 2 sec.	[II] and control light on
Stop the pause	Press [II] 2 sec.	Previous settings

Recall Function

After switching off the hob (①), it is possible to recall the last settings:

- Cooking stages of all cooking zones (Booster)
- Minutes and seconds of programmed cooking zone-related timers
- Keep warm function
- Automatic cooking

The recall procedure is following:



- Press the key [①] for 2 sec.
- Then press [II] before the light stops blinking.

The previous settings are again active.

“Keep warm” Function

This function allows the reach and automatically maintains at the temperature of 70°C. This will avoid liquids overflowing and fast burning at the bottom of the pan.


 
- **To engage, to start the function « Keep warm »:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the Keep warm	Press on key []	[U]
To stop	Press on key []	[0]

The maximum duration of keeping warm is 2 hours.

Bridge or Automatic Bridge Function

This function allows the use of 2 cooking zones at the same time with the same features as a single cooking zone. With this function the Double Booster is not allowed.

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the hob	Press key [①] for 2 sec.	[0]
Activate the bridge	Place a pan on one of the two zones that will be bridged and press simultaneously the corresponding cooking zones display or Automatically: put a great pan on the 2 zones	[0] and []
Increase power	Slide on the “SLIDER“	[] [1] to [9]
Stop the bridge	Press simultaneously on the two cooking zones display	[0]

Control panel locking

To avoid modification of the setting of the cooking zones, in particular during cleaning, the control panel can be locked (with exception to the On/Off key [①]).

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the hob	Press key [①] for 2 sec.	[0]
Locking the hob	Hold for 3 sec. a cooking zone display then press the "SLIDER" which scrolls and swipe from the left to the right	[L]
Unlock the hob	Hold for 3 sec. a cooking zone display then press the "SLIDER" which scrolls and swipe from the right to the left	[0] or [H]

“Chef“ Function

This function changes the hob in 2 big zones.

- **Start up/stop the chef function:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Engage the chef function	Press [🔥]	[5] and [7] on the right [9] and [7] on the left
Stop the chef function	Press [🔥]	[0]

The different power levels can be changed. They will be saved and reused at the next activation of the function.

Grill Function

This function allows the optimal use of the grill plate with combining two areas and using appropriate powers.

- **Start up/stop the Grill function:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Engage the Grill function	Press [GRILL]	[5] and [7]
Adjust the power	Slide on the "SLIDER"	
Stop the Grill function	Press [GRILL]	[0]

OPERATING THE HOOD

Starting the hood

- **Start up/stop the hood:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the hood	Press on the hood selection key	[0]
Select the power level	Slide on the "SLIDER"	[1] à [9]
Stop the hood	Slide on the "SLIDER" towards the left	[0]

Booster function

When the function is activated, the hood operates at its maximum power level for 10 minutes.

- **Start up/stop the booster function:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Select the power level	Slide on the "SLIDER"	[1] à [9]
Activate the booster	Slide until the end of the "SLIDER" or press directly at the end of the "SLIDER"	[0]
Stop the booster	Slide on the "SLIDER"	[1] à [9]

Timer function

This function allows to operate the hood for 15 minutes after the switch off of the hob.

- **Start the timer:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the hood	Press on the hood selection key	[0]
Select the power level	Slide on the "SLIDER"	[1] à [P]
Start the timer	Press [⏸] above the hood selection key	[⏸] of the hood is on, [015] on the timer display

- **Stop the timer:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Stop the timer	Press [⏸] above the hood selection key	Nothing

Automatic function

This function adjusts automatically the power level of the hood depending on the power level of the cooking zones.

- **Activate / deactivate the automatic function:**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the automatic function	Press 3 sec. on the hood selection key	[A]
Deactivate the automatic function	Press 3 sec. on the hood selection key	[0]

Note: it is possible to quickly change the power of the hood when the automatic function is activated, by sliding your finger on the "SLIDER".

**This temporarily stops the automatic function.
The automatic function is reactivated the next time the hob is started.**

COOKING ADVICES

Pan quality

Adapted materials: steel, enamelled steel, cast iron, ferromagnetic stainless-steel, aluminium with ferromagnetic bottom.

Not adapted materials: aluminium and stainless-steel without ferromagnetic bottom, copper, brass, glass, ceramic, porcelain.

The manufacturers specify if their products are compatible induction.

To check if pans are compatibles:


- Put a little water in a pan placed on an induction heating zone set at level [9]. This water must heat in a few seconds.
- A magnet sticks on the bottom of the pan.

Certain pans can make noise when they are placed on an induction cooking zone. This noise doesn't mean any failure on the appliance and doesn't influence the cooking operating.

The composition of the pan base can affect the evenness of the cooking results and power reception by the inductors.

Only use pots and pans with smooth bases. Rough bases will scratch the ceramic glass.

Where possible, use pans with vertically straight side. If a pan has angular sides, induction also acts on the side of the pan. The sides of the pan may discolour.

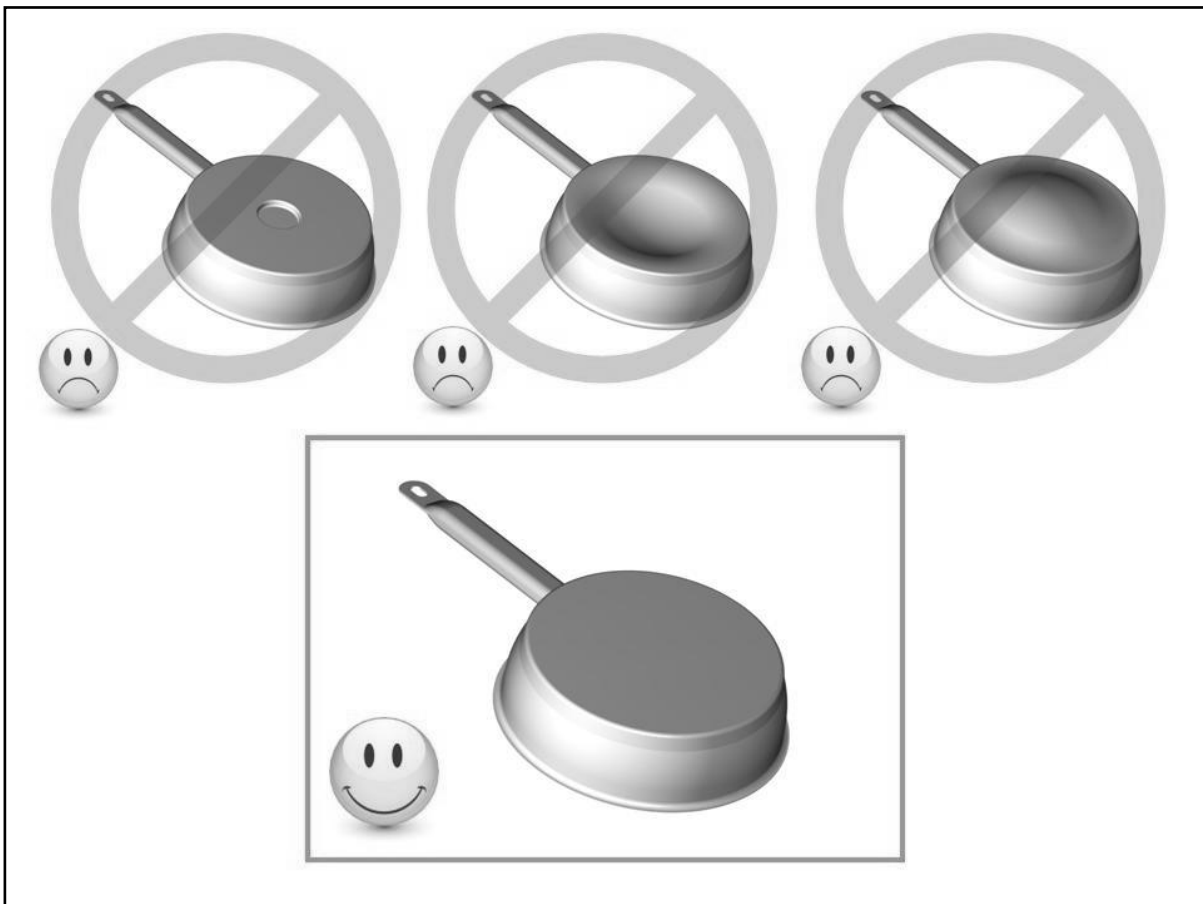

Pan dimension

The cooking zones are, until a certain limit, automatically adapted to the diameter of the pan. However, the bottom of this pan must have a minimum of diameter according to the corresponding cooking zone.

To obtain the best efficiency of your hob, please place the pan well in the centre of the cooking zone.

Examples of cooking power setting

(the values below are indicative)

1 to 2	Melting Reheating	Sauces, butter, chocolate, gelatine Dishes prepared beforehand
2 to 3	Simmering Defrosting	Rice, pudding, sugar syrup Dried vegetables, fish, frozen products
3 to 4	Steam	Vegetables, fish, meat
4 to 5	Water	Steamed potatoes, soups, pasta, fresh vegetables
6 to 7	Medium cooking Simmering	Meat, lever, eggs, sausages Goulash, roulade, tripe
7 to 8	Cooking	Potatoes, fritters, wafers
9	Frying, roasting Boiling water	Steaks, omelettes, fried dishes Water
P and " "	Frying, roasting Boiling water	scallops, steaks Boiling significant quantities of water

MAINTENANCE AND CLEANING OF THE HOB

Switch-off the appliance before cleaning.

Do not clean the hob if the glass is too hot because they are **risk of burn**.

- Remove light marks with a damp cloth with washing up liquid diluted in a little water. Then rinse with cold water and dry the surface thoroughly.
- Highly corrosive or abrasive detergents and cleaning equipment likely to cause scratches must be absolutely avoided.
- Do not ever use any steam-cleaner or pressure washer
- Do not use any object that may scratch the ceramic glass.
- Ensure that the pan is dry and clean. Ensure that there are no grains of dust on your ceramic hob or on the pan. Sliding rough saucepans will scratch the surface.
- Spillages of sugar, jam, jelly, etc. must be removed immediately. You will thus prevent the surface being damaged.

MAINTENANCE AND CLEANING OF THE HOOD

Regular cleaning of the hood guarantees correct and error-free operation and extends the life of the hood. Be sure to clean the grease filters according to the manufacturer's recommendations.

Filter cleaning indicator

When the hood is on and the suction power is set to [0], the time remaining before cleaning the filter is displayed on the timer display.

The default setting is 30 hours, but you can change this setting if you want.

- **Show the remaining time:**

Action

Activate the hood

Control panel

Press on the hood selection key

Display

[remaining time] on the timer display

- **Grease filter cleaning indicator:**

When the grease filters are to be cleaned, the timer display shows [00h] and a dot flashes on the hood selection key.

- **Reset the time remaining before cleaning the hood filter**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the hob	Press key [⏻] for 2 sec.	[0] and a dot flashes on the hood selection key
Select the hood	Press on the hood selection key	[0] and [00h] on the timer display
Reset the counter	Press on the timer key for 3 sec.	The last user-specified setting is activated
Confirm the setting	Press on the timer key again	-

- **Change the time remaining before cleaning the hood filter**

<u>Action</u>	<u>Control panel</u>	<u>Display</u>
Activate the hob	Press key [⏻] for 2 sec.	[0] and a dot flashes on the hood selection key
Select the hood	Press on the hood selection key	[remaining time] on the timer display
Change the counter time	Press on the timer key for 3 sec. adjust to press on the key [+] or [-]	[remaining time] on the timer display
Confirm the setting	Press on the timer key again	-


Cleaning the grease filter in the dishwasher

The grease filter must be placed vertically in the lower basket and washed at 60 °C maximum with a mild detergent.

After cleaning, replace the grease filters in the hood.

Replacement of the activated carbon filter

The active carbon filter used for the recirculation and to catch the smells, must be replaced after 6 month of normal use.

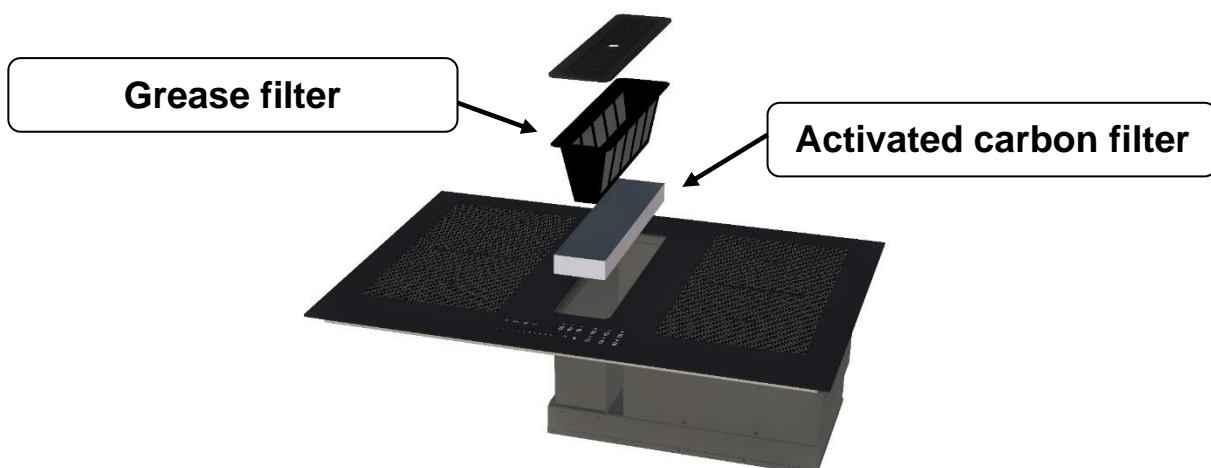

WHAT TO DO IN CASE OF A PROBLEM

The hob or the cooking zone doesn't start-up:

- The hob is badly connected on the electrical network.
- The protection fuse cut-off.
- The locking function is activated.
- The sensitive keys are covered of grease or water.
- An object is put on a key.

The control panel displays [U]:

- There is no pan on the cooking zone.
- The pan is not compatible with induction.
- The bottom diameter of the pan is too small.

The control panel displays [E]:

- The electronic system is defective.
- Disconnect and replug the hob.
- Call after sales

One or all cooking zone cut-off:

- The safety system functioned.
- You forgot to cut-off the cooking zone for a long time.
- One or more sensitive keys are covered.
- The pan is empty and its bottom overheated.
- The hob also has an automatic reduction of Booster level and breaking Automatic overheating

Continuous ventilation after cutting off the hob:

- This is not a failure, the fan continuous to protect the electronic device.
- The fan cooling stops automatically.

The automatic cooking system doesn't start-up:

- The cooking zone is still hot [H].
- The highest Booster level is set [9].

The control panel displays [U]:

- Refer to the chapter "Keep warm".

The control panel displays [II]:

- Refer to the chapter "Stop&Go"

The control panel displays [L]:

- Refer to the chapter "Control panel locking"

The control panel displays [] or [Er03]:

- An object or liquid covers the control keys. The symbol disappears as soon as the key is released or cleaned.

The control panel displays [E2] or [EH]:

- The hob is overheated, let it cool down and then turn it on again.

The control panel displays [E3]:

- The cookware is not compatible, use another cookware.

The control panel displays [E8]:

- The air inlet of the ventilator is obstructed, release it.

The control panel displays [E6]:

- The supply voltage is out of range (voltage and/or frequency). Check the connection and reconnect the hob.


If no error code is displayed and the User Interface is no reacting on any keypress, check power supply voltage for missing line conductors, missing bridges and wrong connection to 400 V.

If one of the symbols above persists, call the After-Sales Service.

ENVIRONMENT PRESERVATION

- The materials of packing are ecological and recyclable.
- The electronic appliances are composed of recyclable, and sometimes harmful materials for the environment, but necessary to the good running and the safety of the appliance.

- Don't throw your appliance with the household refuses
- Get in touch with the waste collection centre of your commune that is adapted to the recycling of the household appliances.

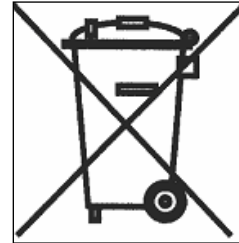


INSTALLATION INSTRUCTIONS

The installation must be performed by a qualified electrical contractor.

How to stick the gasket:

The gasket supplied with the hob prevents the intrusion of liquids into the cabinet below. It's installation has to be done carefully, in conformity with the following drawing.

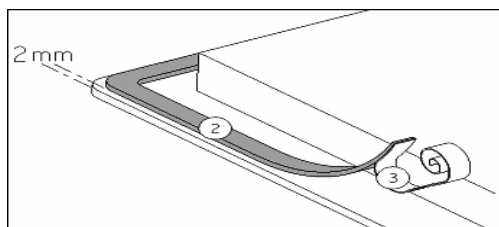


Stick the gasket (2) two millimetres from the external edge of the glass, after removing the protection tape (3).


Fitting - installing:


- The cut-out sizes are:

Ref.	Cut size		Glass size			Flush mounting			
	Width	Depth	Width	Depth	Thick	Width	Depth	Thick	Radius
WEP78FS2W	750	490	780	520	4	786	526	4	8

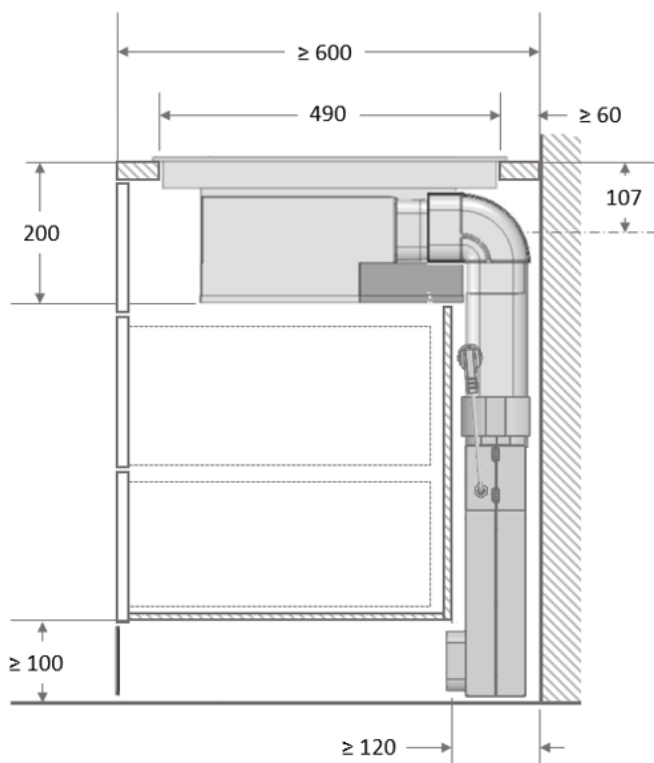

Filters installation

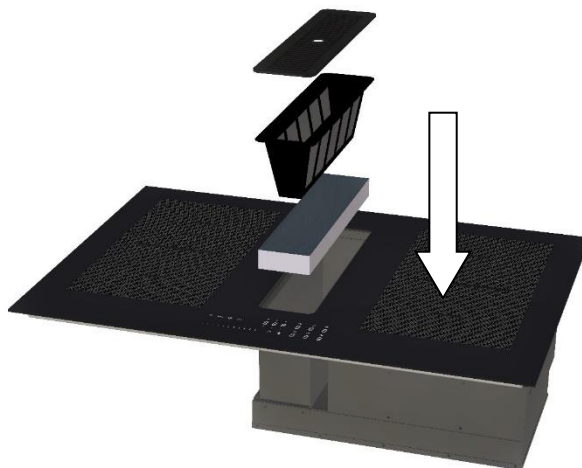

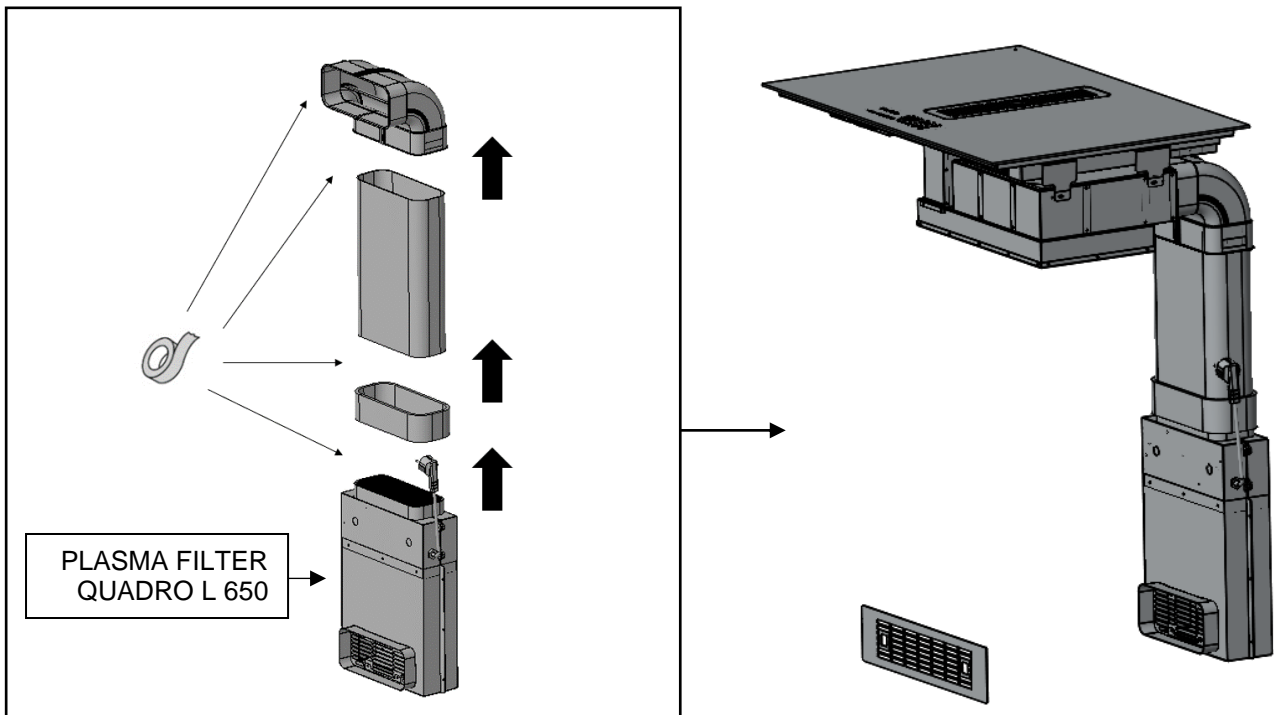

- **Ensure that there is a distance of 50 mm between the hob and the wall or sides.**
- The hobs are classified as “Y” class for heat protection. Ideally the hob should be installed with plenty of space on either side. There may be a wall at the rear and tall units or a wall at one side. **On the other side, however, no unit or divider must stand higher than the hob.**
- The piece of furniture or the support in which the hob is to be fitted, as well as the edges of furniture, the laminate coatings and the glue used to fix them, must be able to resist temperatures of up to 100 °C.
- Do not install the hob at the top of a non-ventilated oven or a dishwasher.
- Ensure under the bottom of the hob casing a space of 20 mm to ensure good air circulation of the electronic device.
- If a drawer is placed under the hob, avoid putting into this drawer flammable objects (for example: sprays) or non-heat-resistant objects.
- Materials which are often used to make worktops expand on contact with water. To protect the cut-out edge, apply a coat of varnish or special sealant. Particular care must be taken when applying the adhesive joint supplied with the hob to prevent any leakage into the supporting furniture. This gasket ensures a good seal when used in conjunction with smooth work top surfaces.
- The connection cord should not be subjected to any mechanical constraint.
- Do not use inappropriate child safety shields or hob guards. These can cause accidents.
- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
- The plinth grid must be installed in order to guarantee the good working of the ventilation system.

ELECTRICAL CONNECTION

- The installation of this appliance and the connection to the electrical network should be entrusted only to an electrician perfectly to the fact of the normative regulations and which respects them scrupulously.
- Protection against the parts under tension must be ensured after the building-in.
- The data of connection necessary are on the stickers place on the hob casing near the connection box.
- The connection to the main must be made using an earthed plug or via an omnipolar circuit breaking device with a contact opening of at least 3 mm.
- The electrical circuit must be separated from the network by adapted devices, for example: circuit breakers, fuses or contactors.
- If the appliance is not fitted with an accessible plug, disconnecting means must be incorporated in the fixed installation, in accordance with the installation regulations.
- The inlet hose must be positioned so that it does not touch any of the hot parts of the hob or oven.

Caution!

This appliance must only be connected to a network 230 V~ 50/60 Hz.


Always connect the earth wire.

Respect the connection diagram.

The connection box is located underneath at the back of the hob casing. To open the cover use a medium screwdriver. Place it in the slits and open the cover.

Mains	Connection	Cable diameter	Cable	Protection calibre
230V~ 50/60Hz	1 Phase + N 2 Phase	3 x 2.5 mm ²	H 05 VV - F H 05 RR - F	25 A *
400V~ 50/60Hz	2 Phases + N	4 x 1.5 mm ²	H 05 VV - F H 05 RR - F	16 A *

 * calculated with the simultaneous factor following the standard EN 60 335-2-6



Frequent loosening and screwing of the screws on the connection box risks damaging the efficiency of the tightness once screwed. It is therefore advisable to keep screwing and unscrewing to a minimum.

Ensure that the cables are correctly inserted and tightly screwed down.

4 weeks after installation, be sure to tighten again the screws in the terminal block.

Connection of the hood

It is necessary to plug the hood too on a standard electrical outlet 230 V~50/60 Hz.

We cannot be held responsible for any incident resulting from incorrect connection or which could arise from the use of an appliance which has not been earthed or has been equipped with a faulty earth connection.

