
witt

Cooker Hood Delta 60 SWB – Multicolored

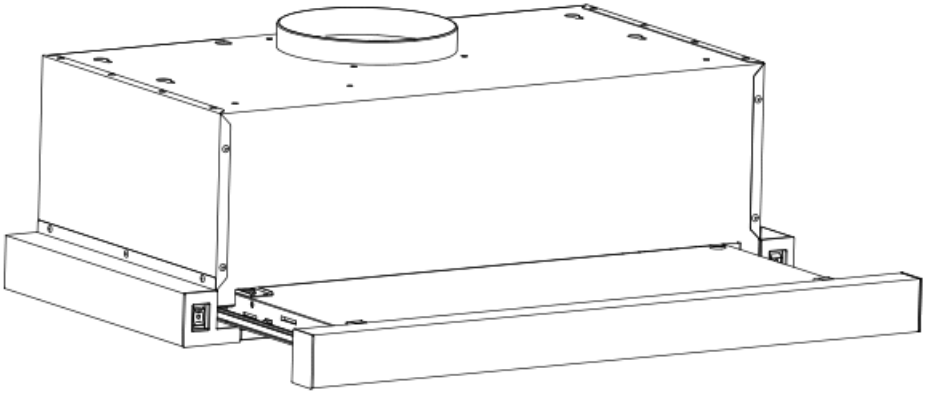

Instruction Manual EN

THANK YOU FOR CHOOSING WITT

Thank you for choosing Witt!

Before using your new Witt product, please read this instruction manual carefully to familiarise yourself with its functions and ensure that you can use the appliance safely.

CONTENTS

SAFETY INSTRUCTIONS....3
Child Safety....4
NOTES....4
INSTALLATION NOTES....5
PRODUCT DIMENSIONS....5
INSTALLING THE COOKER HOOD....6
OPERATION....7
MAINTENANCE....8
Cleaning the Grease Filter....8
Cleaning the Cooker Hood....8
Charcoal Filter (Optional Accessory)....9
TROUBLESHOOTING....10
WARRANTY AND SERVICE....11
DISPOSAL AND ENVIRONMENTAL INFORMATION....13
EU DECLARATION OF CONFORMITY....13

SAFETY INSTRUCTIONS

Important – for the user
Keep this instruction manual with the cooker hood. If the cooker hood is sold or passed on to another user, this instruction manual must accompany it.

Read these instructions carefully before installing and using the cooker hood. They have been prepared for your safety and the safety of others.

- The cooker hood is intended exclusively for domestic use. It is not suitable for use in grill bars, restaurants or other commercial environments.
- The cooker hood and its filters must be cleaned regularly to ensure proper operation.
- Clean the cooker hood in accordance with the instructions in this manual. Failure to clean the cooker hood may result in a fire hazard.
- Avoid exposing the cooker hood to direct flames from a gas hob.
- Installation distance: The cooker hood must be installed at 65–75 cm above the hob. See the section *Installing the Cooker Hood*.
- Ensure adequate ventilation in the kitchen.
- Check that the power supply cord is not damaged before connecting the cooker hood to the power supply. A damaged power supply cord must only be replaced by qualified service personnel.
- Adequate ventilation must be provided in the room when the cooker hood is used at the same time as appliances burning gas or other fuels.
- Exhaust air must not be discharged into a duct or flue used to remove combustion gases from gas-fired or other fuel-burning appliances.
- All applicable regulations concerning the discharge of exhaust air must be observed.
- Do not flambé food beneath the cooker hood.
- The cooker hood is not intended for installation above a hob with more than four cooking zones.
- When the cooker hood is used simultaneously with appliances powered by energy sources other than electricity, the negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar).
- **CAUTION:** Accessible parts may become hot when the cooker hood is used with cooking appliances.
- Always disconnect the power supply before cleaning the filters or the exterior of the cooker hood, or before carrying out maintenance.

CHILD SAFETY

- This appliance may be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge, provided they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved.
- Children must not play with the cooker hood.
- Cleaning and user maintenance must not be carried out by children without supervision.

RISK OF ELECTRIC SHOCK!


- Only connect the cooker hood to a properly earthed socket outlet. If in doubt, consult a qualified electrician.
- Failure to follow these instructions may result in death, fire or electric shock.

NOTES

1. Installation must be carried out by a suitably qualified and competent installer.
2. The manufacturer/distributor accepts no liability for property damage or personal injury resulting from failure to comply with the installation instructions in this manual.
3. The cooker hood is designed for connection to a 220–240 V AC, 50 Hz power supply.


INSTALLATION NOTES

1. Before installation, ensure that the area is clean to prevent wood shavings and dust from being drawn into the cooker hood.
2. The cooker hood must not be connected to the same exhaust duct as other appliances, such as gas appliances, heating appliances or warm-air heating systems.
   The exhaust duct must run horizontally or upwards from the connection point and terminate at an opening in an external wall.
3. After installation, check that the cooker hood is level to prevent grease from accumulating on one side.

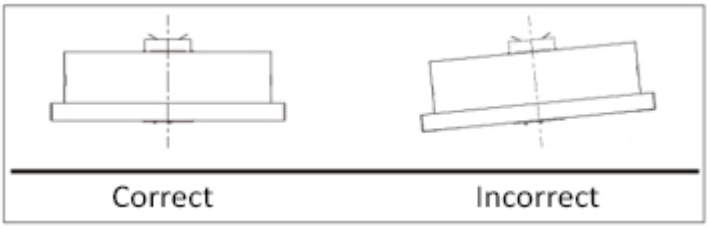


PRODUCT DIMENSIONS


Refer to the illustrations for the dimensions of the cooker hood.

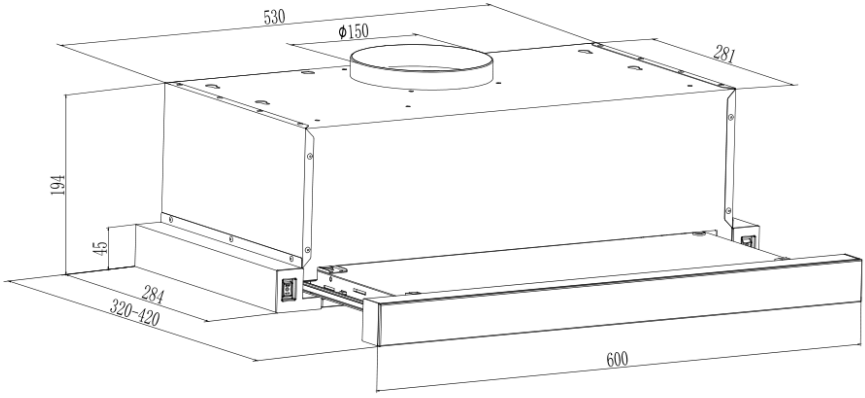


INSTALLING THE COOKER HOOD


1. For optimum extraction performance, the cooker hood must be installed at a distance of 65–75 cm above the hob.
2. Drill four holes with a diameter of 5 mm and one hole with a diameter of 170 mm in the bottom of the wall cabinet.

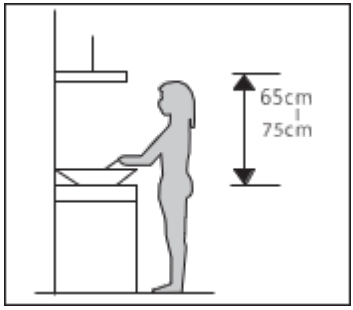

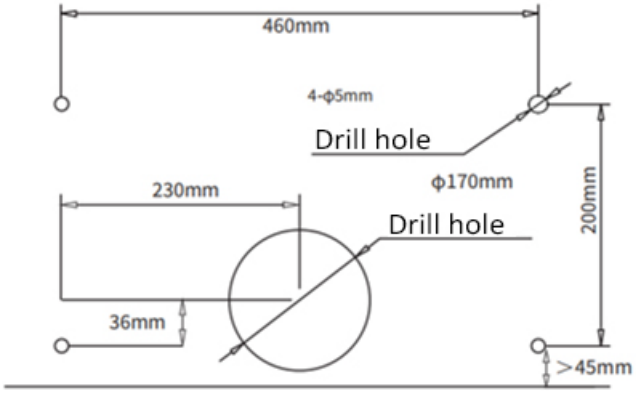

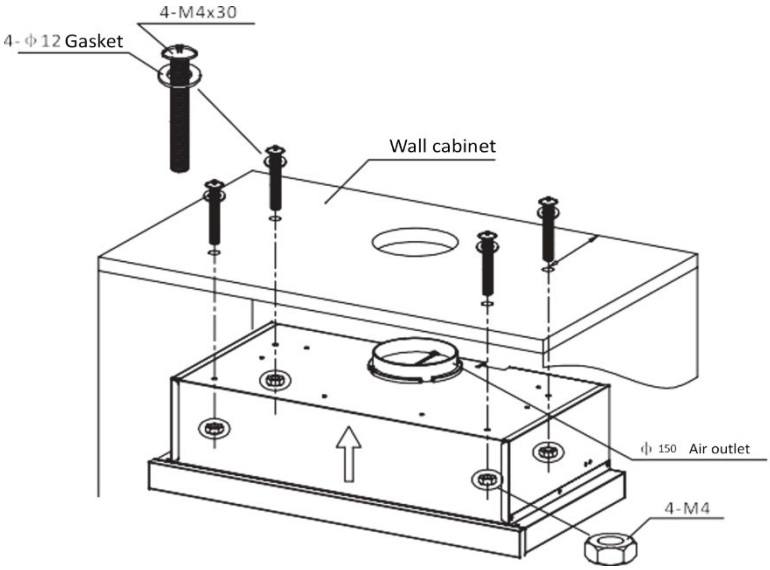

3. Remove the filters and hold the cooker hood in the correct position. Fit the screws, washers and nuts, and tighten the screws. Refit the filters.
4. Once the cooker hood has been installed, the flexible exhaust duct (optional accessory, Ø 150 mm) can be connected to the air outlet on top of the cooker hood if required. Route the other end of the exhaust duct through the prepared opening in the wall.
5. Insert the plug into the socket outlet.

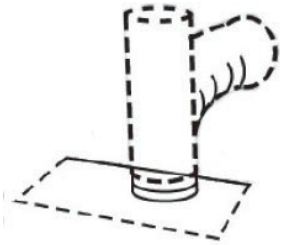

OPERATION

Rocker switches




- The motor switch has two speed settings: high and low. In the centre position, the motor is switched off.
- The light switch is used to switch the light on and off.

MAINTENANCE

CLEANING THE GREASE FILTER

Do not use corrosive cleaning agents to clean the grease filter. Regular cleaning of the filter ensures that the cooker hood operates correctly. Follow the instructions below carefully.

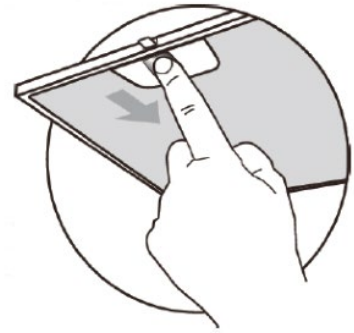

Method 1: Soak the grease filter in clean water at a temperature of 40–50 °C. Add a cleaning agent and leave the filter to soak for 2–3 minutes. Wear gloves and clean the filter using a soft brush. Avoid applying excessive pressure, as the filter is delicate and can easily be damaged.
Method 2: If the filter is marked as dishwasher-safe, it can be washed in a dishwasher at a temperature of approximately 60 °C.

CLEANING THE COOKER HOOD

Always disconnect the cooker hood from the power supply before cleaning.

A. To protect the cooker hood housing against corrosion, clean it with warm water and a non-corrosive cleaning agent every two months.
B. Do not use abrasive cleaning agents, as they may damage the surface of the cooker hood.
C. Prevent water from coming into contact with the motor and other components, as this may damage the cooker hood.
D. Do not expose the charcoal filter to heat.


CHARCOAL FILTER (OPTIONAL ACCESSORY)

The charcoal filter contains activated carbon, which absorbs cooking odours. Over time, the activated carbon becomes saturated, reducing the filter's ability to absorb odours.

The charcoal filter cannot be washed or cleaned by any other means.

Under normal use, the charcoal filter should be replaced every 6 months. If food is frequently fried or deep-fried, the filter should be replaced more often.

1. Remove the metal grease filters.
2. The charcoal filters are located on both sides of the motor. Turn the filters until they are securely fitted (see illustration).
3. To replace the charcoal filters, follow the procedure in reverse order.

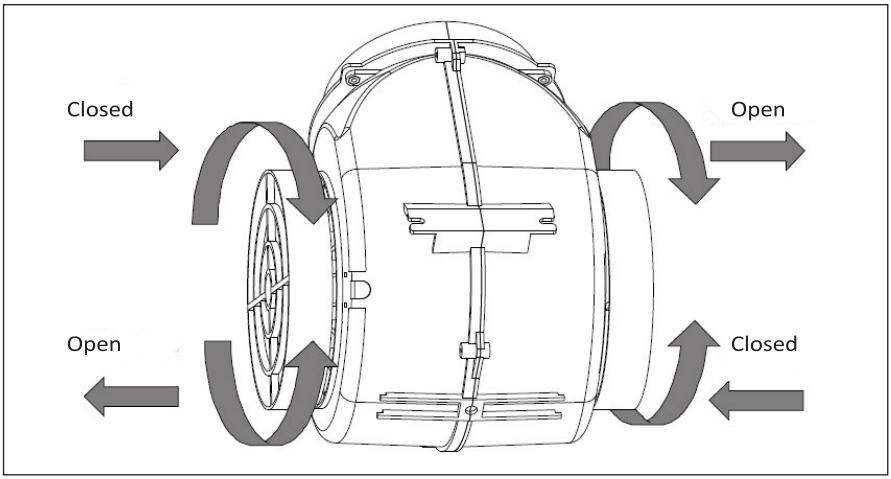

TROUBLESHOOTING

WARNING: Always disconnect the power supply before carrying out troubleshooting or maintenance. Repairs and replacement of electrical components must only be carried out by qualified service personnel.

Problem	Possible cause	Solution
The light is on, but the motor does not operate.	The fan impeller is blocked.	Remove the obstruction.
	The capacitor is damaged.	Replace the capacitor.
	The motor is jammed, or the motor bearing is damaged.	Replace the motor.
	An internal motor wire is disconnected, or a burning smell is coming from the motor.	Replace the motor.
Neither the light nor the motor operates.	In addition to the above, check the following:	
	The light source is defective.	Replace the light source.
	The power cord is loose.	Connect the wires according to the wiring diagram.
Grease drips from the metal grease filter.	The grease filter is heavily soiled.	Clean or replace the metal grease filter immediately.
The cooker hood vibrates.	The fan impeller is damaged and causes vibrations.	Replace the fan impeller.
	The motor is not secured correctly.	Secure the motor correctly.
	The cooker hood housing is not secured correctly.	Secure the housing correctly.
Insufficient extraction performance.	The distance between the cooker hood and the hob is too great.	Adjust the distance.
	Excessive airflow from open doors or windows.	Choose a different location and reinstall the cooker hood.
The cooker hood is tilted.	The screws are not tightened sufficiently.	Tighten the screws and ensure that the cooker hood is level.

WARRANTY AND SERVICE

The product is covered by the applicable statutory consumer rights under the Danish Sale of Goods Act. In Denmark, consumers have a statutory right to make a claim for defects for a period of 2 years from the date of delivery. This right covers defects for which the seller is liable under the Danish Sale of Goods Act.

If you require service or support, please contact the retailer from whom you purchased the product.

When contacting the retailer, please provide the product name and serial number. This information can be found on the rating plate. You may wish to record these details in this manual for future reference. This will make it easier for the service technician to identify the correct spare parts.

Serial number: _____

The manufacturer and/or distributor cannot be held liable for damage resulting from failure to comply with the safety instructions, to the extent permitted by applicable law.

Damage resulting from improper use, lack of maintenance or failure to follow the instructions in this manual is generally not covered by statutory rights relating to defective goods.

As a general rule, statutory rights relating to defective goods do not cover:

- Faults and damage that are not caused by defects for which the seller is liable under the Danish Sale of Goods Act.
- Normal and expected wear and tear.
- Damage caused by pests.
- Damage resulting from the use of non-genuine or unsuitable spare parts.
- Damage resulting from failure to follow the instructions in this manual.
- Damage resulting from incorrect installation or assembly.
- Damage resulting from repairs carried out by unqualified persons.
- Rust and discolouration resulting from improper use, lack of maintenance or exposure to conditions that the product is not designed to withstand.

The above does not limit the consumer's statutory rights.

Service not covered by statutory rights
If the product is submitted for service and it is determined that there is no defect covered by the consumer's statutory rights, a charge may, depending on the circumstances, be made for inspection or service, provided that the consumer has been informed of and accepted the charge in advance.

Product safety
If you believe that the product poses a safety risk (e.g. if it emits smoke or a burning smell, becomes abnormally hot or has damaged parts upon delivery), stop using the product immediately and disconnect it from the power supply, if it is safe to do so.

For safety-related enquiries or incidents, please contact:

Witt Denmark A/S
Gødstrup Søvej 9
7400 Herning, Denmark
E-mail: safety@witt.dk

When contacting us, please provide:
- Product model
- Serial number
- Description of the problem
- Photographs (if possible)

This will help us assess the situation promptly and take the necessary action.

Transport damage
If the product is damaged upon delivery, please contact the retailer as soon as possible.

If the customer has arranged transport of the product after delivery, damage occurring during that transport may fall outside the scope of the consumer's statutory rights.

Any transport damage should be reported as soon as possible after receipt. This does not limit the consumer's statutory rights.

Commercial purchases
Commercial purchases include purchases of products for business use, e.g. in restaurants, cafés or canteens, or for rental purposes.

The product is intended exclusively for use in private households and is not designed for commercial purposes.

Service enquiries
All service enquiries must be directed to the retailer from whom the product was purchased.

DISPOSAL AND ENVIRONMENTAL INFORMATION



The crossed-out wheeled bin symbol indicates that the product must not be disposed of with normal household waste.

At the end of its service life, the product must be taken to an authorised collection point for the proper handling of electrical and electronic equipment in accordance with applicable local and national regulations and Directive 2012/19/EU (WEEE).

Proper disposal helps prevent harmful effects on the environment and human health.

Packaging materials are recyclable and must be sorted in accordance with local waste sorting regulations.

EU DECLARATION OF CONFORMITY

The full EU Declaration of Conformity is available on request from Witt Denmark A/S.

Witt Denmark A/S
Gødstrup Søvej 9
7400 Herning
Denmark
www.witt.dk