


Roomba® Plus 615 - 619

Combo Robot + Wash Only Dock


Owners Guide

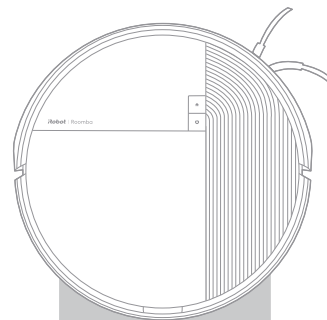

iRobot


Getting Started

1 Remove the foam inserts from both sides of the Robot. Peel off the protective film on the front.

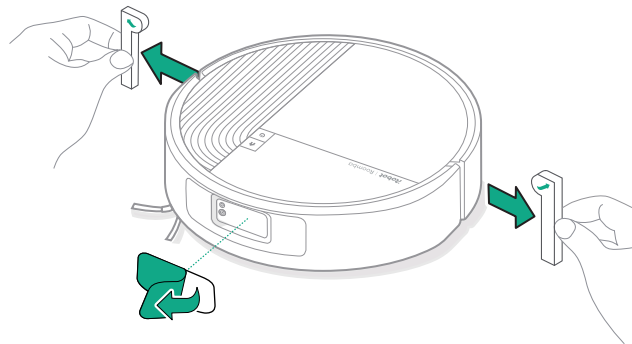


2 Install the Side Brush.

Align the Side Brush with the mounting post on the Robot and press down until you hear a "click".

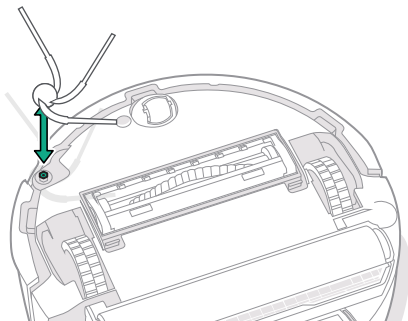


3 Place the Dock on a hard and level floor.

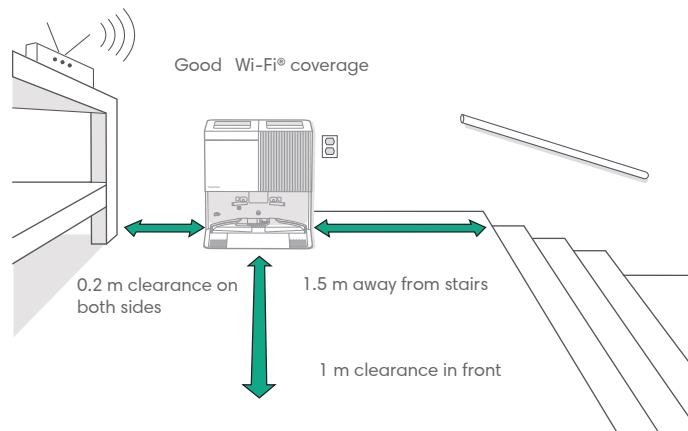

- Note:**
- Keep the Dock away from direct sunlight exposure. Ensure the area around the Dock is free of clutter so that the Robot can successfully return to the Dock.
 - Do not place the Dock on a carpet.


- WARNING:** To prevent the Robot from falling down stairs, ensure the Dock is at least 1.5 m away from the stairs.

4 Plug in your dock.

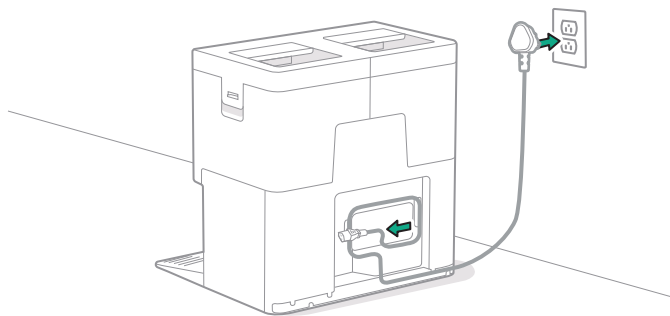

Plug the Power Cord into the back of the dock, then into a wall outlet. Wrap the cord on the back so it won't get in the way of the robot as it comes and goes.

5 Power on and wake up the Robot.

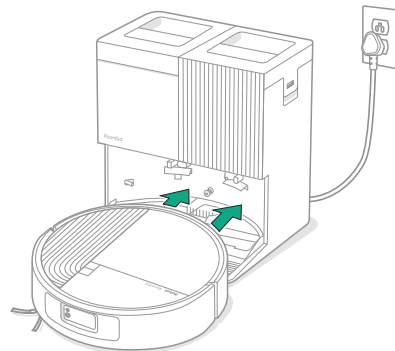


Place the Robot in front of the Dock in the direction shown in the figure, and slowly push it forward until it contacts the Charging Contacts of the Dock. The indicator will turn white, indicating that the Robot is powering on. You will then hear a voice prompt, indicating that the Robot is fully powered on and awake.



Note:

- For first-time use, after the base station is powered on, gently push the Robot into the Dock to wake it up.
- When using the Robot in a new environment, have it start from the Dock to generate a new map.
- Although the Robot comes with a small amount of residual charge, it is recommended to charge it for 4 hours before the first cleaning cycle.
- To remove the Robot from the Dock, slide it toward you and then lift it out.
- New products are subjected to water testing before leaving the factory, so a small amount of residual water may be present. This is normal.

6 Fill with clean water tank.

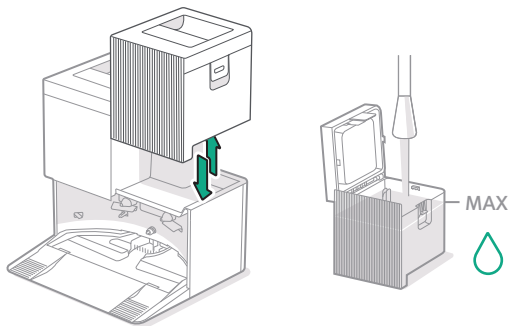

Remove the Clean Water Tank (right) from the Dock. Fill the Clean Water Tank with clean water.

7 Download the Roomba® Home app.

Scan the QR code with your mobile device's camera, or search for Roomba® Home in your App store. The Roomba® Home app and a Wi-Fi connection are required to complete setup.

Add device

After the robot powers on, tap "Connect" to configure the network;



Once the Robot is set up in the app, you will be able to:

- Control when, where, and how it cleans
- Set up scheduled schedules
- Customize cleaning preferences
- Access tips, tricks, and FAQs



Important: Wi-Fi connectivity only supports 2.4 GHz networks; 5 GHz networks are not supported.

Charging

Illustration of Indicator Lights

 	White	Standby / Cleaning / Returning to Dock
	Pulsing white	Powering on / Charging / Connecting to Wi-Fi / Firmware update in progress
	Flashing white	Returning to Dock after interruption / Downloading firmware update / Factory reset in progress.
	Flashing red	Robot error
	Light off	Powered off / Sleep mode
	Flashing red and white alternately	Dock error

Recharge and Resumed Cleaning

When the Robot needs to recharge, it will return to the Dock. Once it has charged enough to complete the remaining cleaning task, it will resume cleaning from where it left off.

Standby Mode

The Robot consumes a small amount of power while on the Dock. When not in use for an extended period, you can press and hold. Power Button for 10 seconds to power off the Robot. To power it back on, press Power Button for 3 seconds.

Cleaning

Button Controls

 Home Button	Press	If Robot is outside Dock	Send Robot back to Dock
		If Robot is on Dock	Wash mopping pads
	Double-Press	If Robot is outside Dock	Activate Spot Cleaning
	Press and hold this button for 10s, and press the Power Button within 5s	Factory reset	
 Power Button	Press		Start/Pause cleaning
	Press and hold for 3s		Power on
	Press and hold for 10s		Power off (with shutdown tone)
	Press and hold for 15s		Forced shutdown

Cleaning Settings

The Robot will automatically explore your home and clean in systematic, row-by-row passes. If the battery runs low during a cleaning cycle, the Robot will return to the Dock, and then resume cleaning from where it left off.



Tips:

Before cleaning, clear excessive clutter from the floor. Frequent use of the Robot will keep your floors clean.

If you are unsure whether the Robot has finished cleaning or is paused, check its status in the Roomba® Home app.



Note: The Roomba® Home app and a Wi-Fi connection are required to complete setup. The mobile app allows you to clean specific rooms, schedule cleaning tasks, and set up automated work/schedules. It is strongly recommended to use the Roomba® Home app to control cleaning functions.

Spot Cleaning

With the Robot outside the Dock, double-press the Home Button to spot clean a designated area. Once Spot Cleaning is complete, the Robot will finish its task. Press the Home Button to send it back to the Dock.

Auto-Washing

Your Robot will automatically return to the Dock during and after each cleaning cycle to empty the dirty water and wash the Roller Mop.




Note: Roomba® robots are generally designed to vacuum on most floor types. However, because unfinished hardwood floors and certain laminate/vinyl floors or subfloors may be susceptible to water damage, we do not recommend using the Roller Mop on such flooring.


About Your Robot

Top View

EN

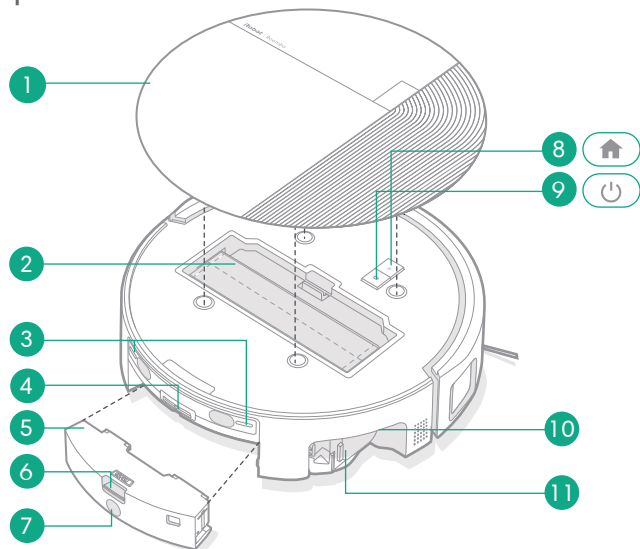


- | | |
|--|------------------------------|
| 1 Robot Top Cover | 7 Clean Water Fill Port |
| 2 Robot Dirt Disposal Bag | 8 Home Button |
| 3 Charging Contacts | 9 Power Button |
| 4 Robot Water Spray Nozzle | 10 Roller Mop Release Button |
| 5 Robot Dirty Water Bin | 11 Roller Mop Assembly |
| 6 Dirty Water Container Release Button | |

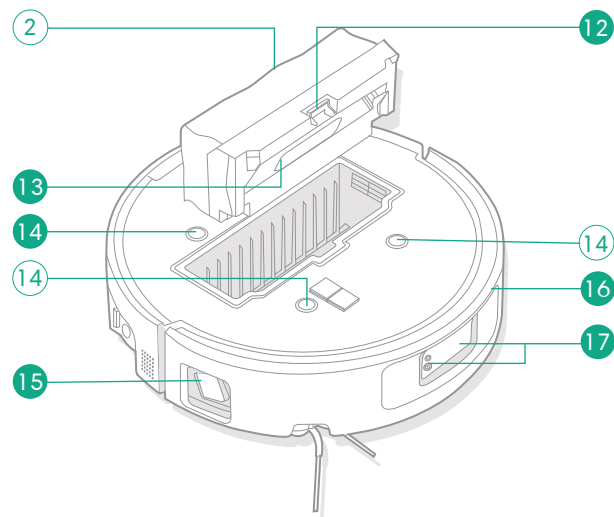


- | | |
|-------------------------------------|--|
| 12 Dirt Disposal Bag Release Button | 15 Side Single-line Laser Edge Sensor |
| 13 Dirt Disposal Bag Emptying Inlet | 16 Front Bumper Sensor |
| 14 Magnetic Top Cover Latch | 17 Navigation and Obstacle Avoidance Module+Fill Light |

Bottom View

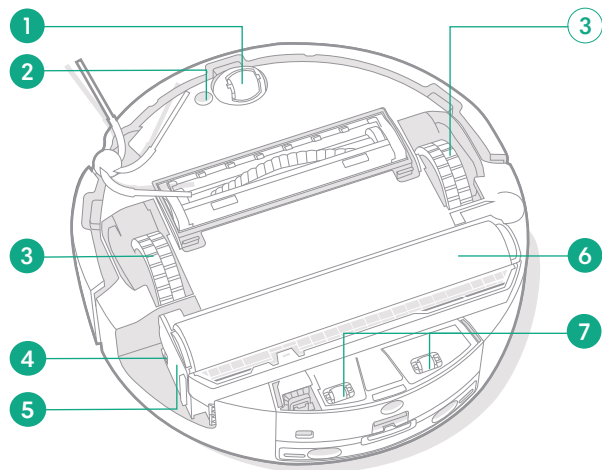


- | | |
|--------------------------------------|------------------------|
| 1 Liftable Universal Wheel | 6 Roller Mop |
| 2 Ultrasonic Carpet Detection Sensor | 7 Rear Auxiliary Wheel |
| 3 Drive Wheel | |
| 4 Roller Mop Release Button | |
| 5 Roller Mop End Cap | |

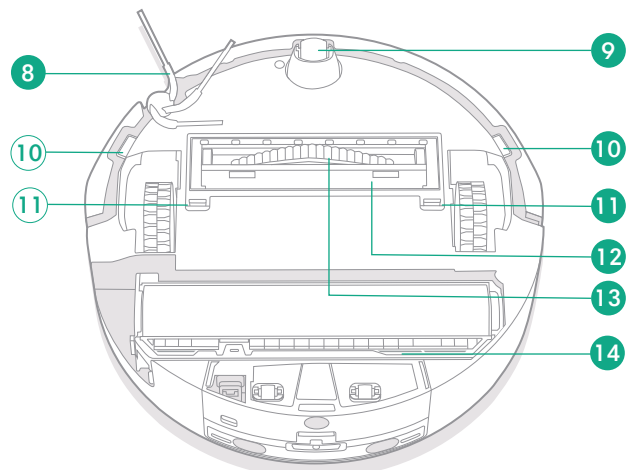

- | | |
|------------------------------------|------------------------------|
| 8 Side Brush | 12 Main Brush Cover |
| 9 TOF Floor Detection Sensor | 13 Anti-tangle Main Brush |
| 10 Infrared Floor Detection Sensor | 14 Roller Mop Scraper Groove |
| 11 Main Brush Cover Release Button | |


About Your Self-Cleaning Dock

Front View

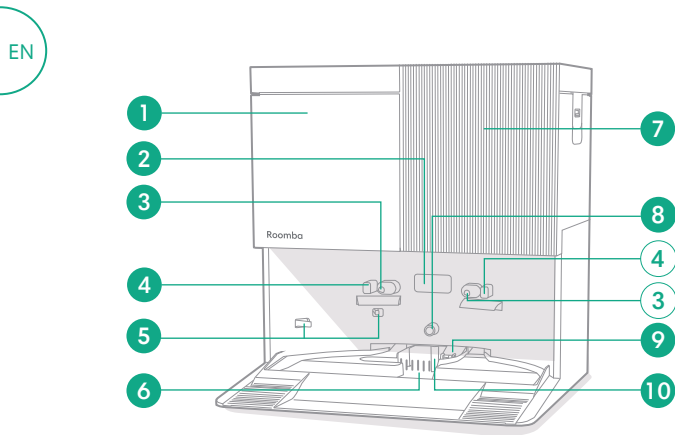


- 1 Dirty Water Tank
- 2 Docking Signal Emission Area
- 3 Return-to-Dock Alignment Corner
- 4 Dock Charging Contacts
- 5 Drainage Push Rod
- 6 Cleaning Tray
- 7 Clean Water Tank
- 8 Clean Water Inlet
- 9 Tray Float
- 10 Dirty Water Suction Port

Rear View

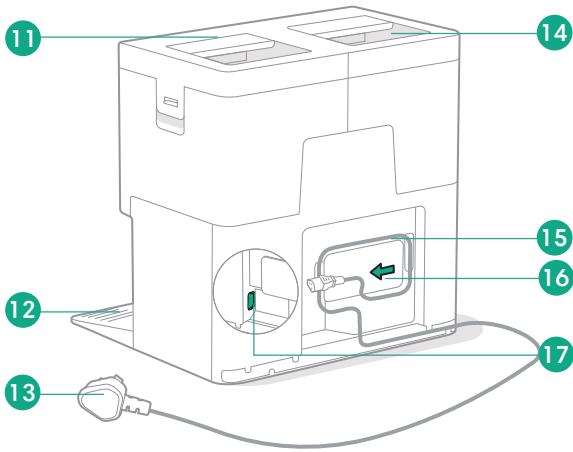

- 11 Clean Water Tank Lid
- 12 Ramp Plate
- 13 Power Plug
- 14 Dirty Water Tank Lid
- 15 Power Cord
- 16 Cord Reel
- 17 Power Cord Inlet

Internal View

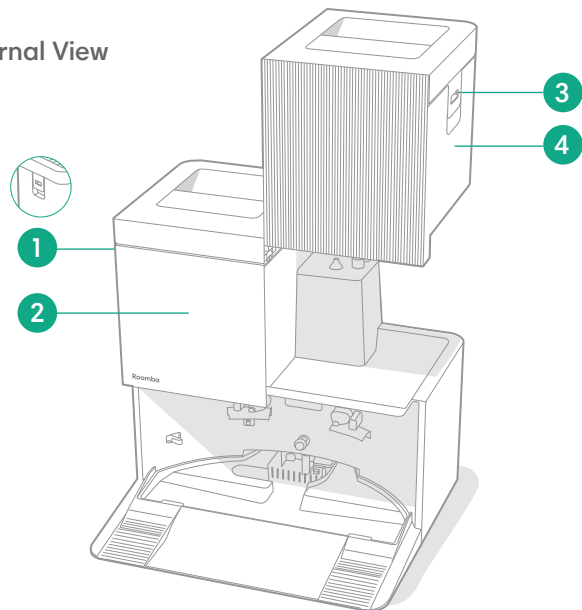


1 Dirty Water Tank Lid Latch

2 Dirty Water Tank

3 Clean Water Tank Lid Latch

4 Clean Water Tank

Top View

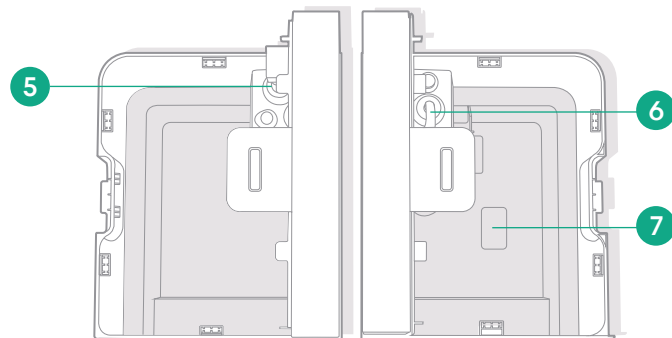

5 Dirty Water Tank Inlet

6 Clean Water Tank Outlet

7 Scale Inhibitor Module

Robot Care and Maintenance


To keep your Robot running at peak performance, it is essential to perform the following basic care and maintenance regularly. The Roomba® Home App provides personalized reminders for accessory replacement and important maintenance needs. Additional instructional videos are available in the Roomba® Home app. If you notice the Robot is picking up less debris from the floor, replace the Dirt Disposal Bag and clean the brushes.

Components	Maintenance Frequency	Replacement Frequency*
Main Brush Cover	Check every 6 months	Replace if worn or damaged
Charging contacts	Clean every 2 weeks or as needed	-
Dirt Disposal Bag	Replace as needed	As needed, recommended every 1 month
Side brush	Clean every 2 weeks or as needed	Every 3-6 months
Anti-tangle Main Brush	Clean weekly	Every 6-12 months
Liftable Universal Wheel	Clean every 4 weeks (weekly if you have pets)	-
Drive wheel	Clean every 4 weeks (weekly if you have pets)	-
Roller Mop	Clean as needed	Every 3-6 months
Roller Mop Scraper Groove	Clean every 2 months or as needed	-
Sensors (Navigation and Obstacle Avoidance Module, Edge Sensor, Cliff Sensor, etc.)	Clean monthly or as needed	-

* Replacement frequency may vary. Replace components if visible wear is present.

Clean the Side Brush


Pull out to remove the Side Brush. Remove any hair or debris, then reinstall the Side Brush. You will hear a click when it is securely in place.

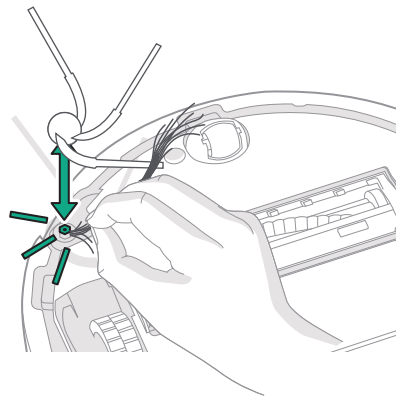


Important: It is recommended to replace the Side Brush every 3-6 months to maintain optimal cleaning performance.

Clean the Roller Brush


1 Pinch the Main Brush Cover Release Buttons, lift the cover upwards.

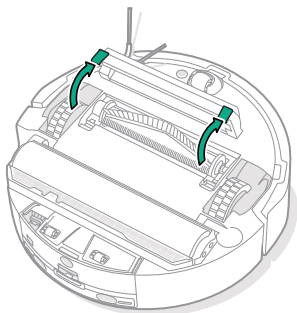


2 Remove the Main Brush.

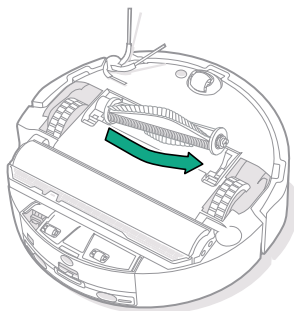


3 Detach the end cap from the end of the Main Brush.

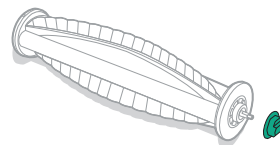

4 Remove any hair or debris tangled on the Main Brush and End Cap, check for any foreign objects between the cutter teeth, and clean them promptly. Reinstall the End Cap.

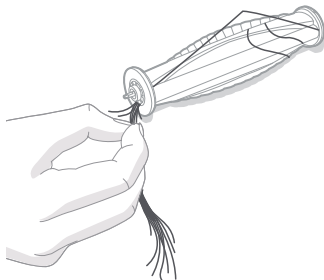

5 Reinstall the Main Brush and Main Brush Cover onto the Robot, ensuring all four corners of the cover are pressed securely into place. You will hear a click when it is securely in place.

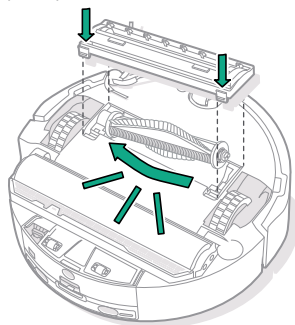


 Important: It's recommended to replace the Main Brush every 6–12 months to maintain optimal cleaning performance. Ensure the Main Brush Cover is properly installed.


Clean the Universal Wheel

EN

- 1 Use a cleaning brush or dry cloth to remove hair and debris from the universal wheel.

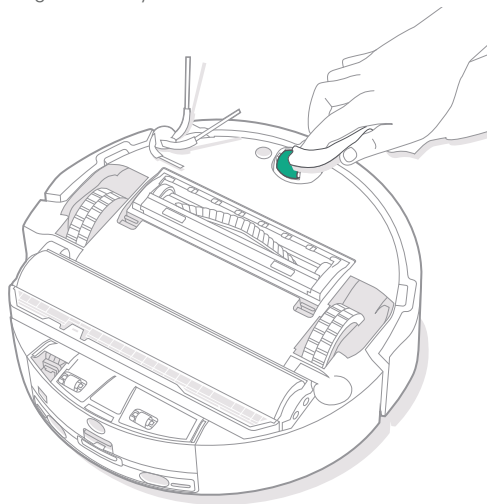

- 2 Use a tool to pry up the universal wheel and remove it from its housing.

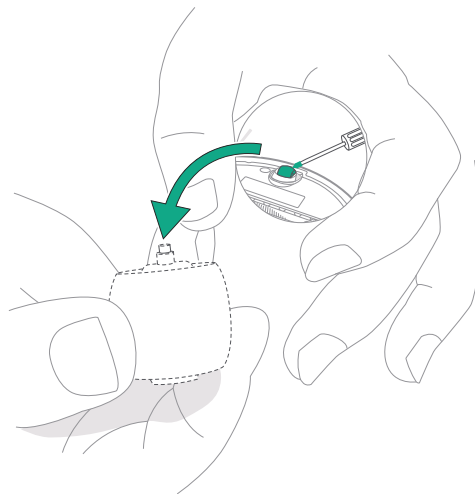


Important: A universal wheel jammed with hair and debris may cause floor damage.

Clean the Rear Auxiliary Wheel

Use a tool to pry up and slide the Rear Auxiliary Wheel from right to left to disengage it from the metal shaft. Slide off the Rear Auxiliary Wheel, then use a cleaning brush to remove hair and debris from behind it.


Rear Auxiliary Wheel

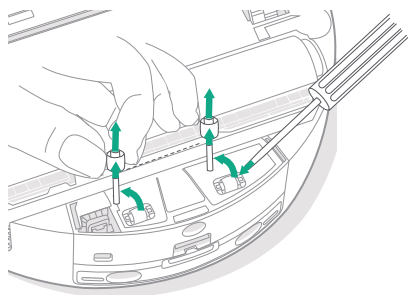


Clean the Charging Contacts and sensors

Wipe the charging contacts and sensors with a clean, dry cloth.

Charging Contacts

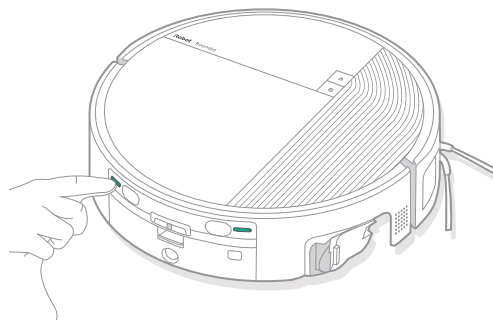


Sensors

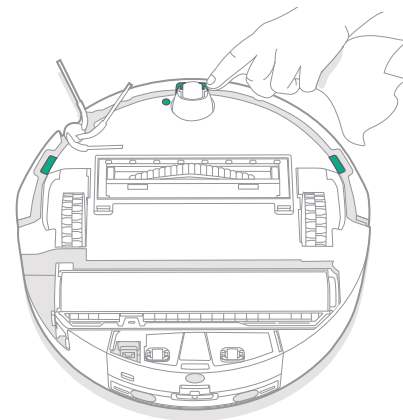


Important: Do not spray cleaning solutions or water onto the sensors or sensor openings.

Replace the Dirt Disposal Bag


- 1 Lift upward to remove the Robot's top cover.

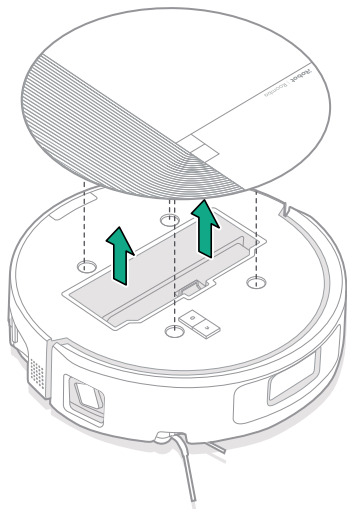

- 2 Press and hold the Dirt Disposal Bag Release Button to remove the Dirt Disposal Bag.

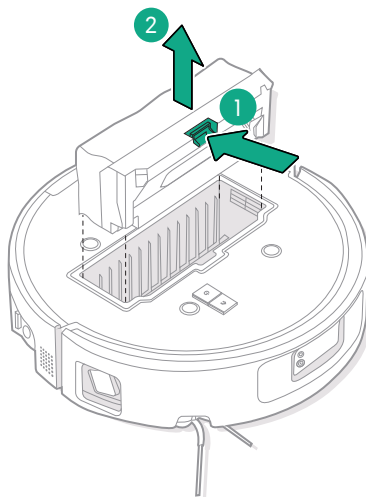


- 3 Insert a new Dirt Disposal Bag, then close the Robot's top cover.

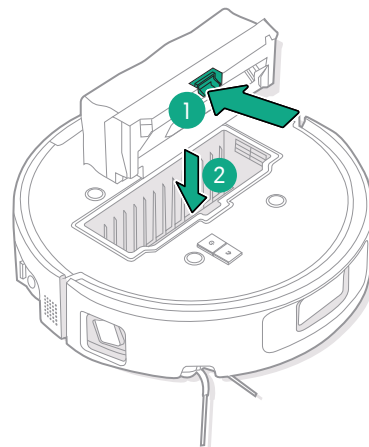


 **Important:** For optimal performance, replace the Dirt Disposal Bag promptly based on actual usage.

Clean the Dirty Water Container


- 1 Press down on the Dirty Water Container Release Button to remove the container.

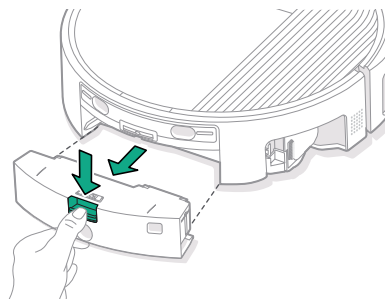


- 4 Rinse and wipe away any residue from the top surface of the container.

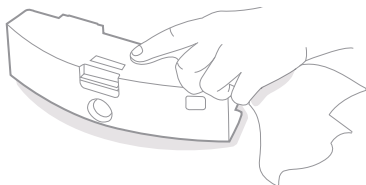


- 2 Flip open the Dirty Water Container Cover.

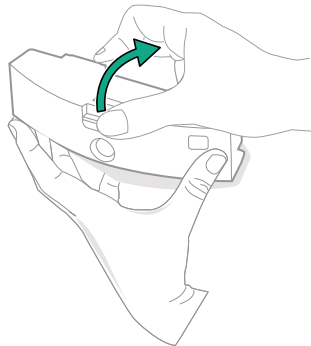


- 5 Wipe away any residue from the bottom of the Robot. This area must remain free of residue to ensure the container slides correctly into the Robot.

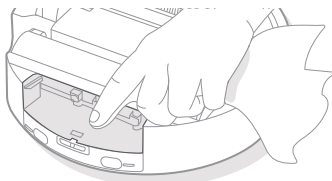

- 3 Empty the dirty water, rinse the container under clean water, and wipe away any residue.

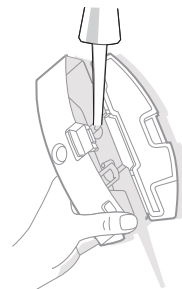


- 6 Reinstall the Dirty Water Container into the Robot. You will hear a "click" when it is securely in place.

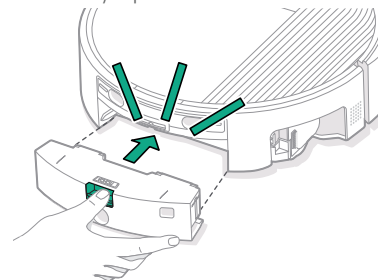


Important: Do not clean the Dirty Water Container in a dishwasher. Clean the container thoroughly to maintain optimal cleaning performance.

Clean the Roller Mop

1 Press and hold the Roller Mop Release Button on the side, then slowly pull out the Roller Mop horizontally.

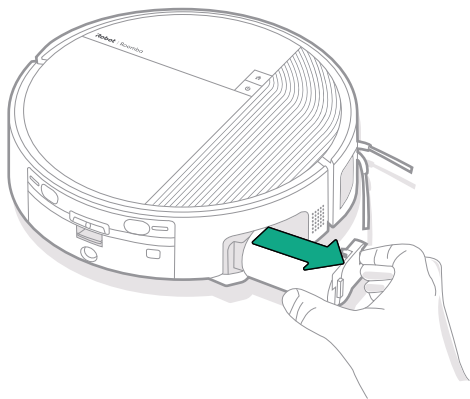


2 Clean and rinse the Roller Mop, then allow it to air-dry at room temperature.

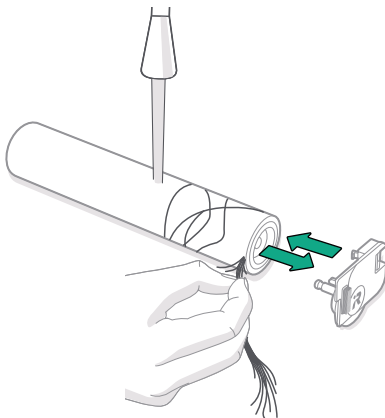

Note: When removing the roller mop end cap, pull it out with moderate force. When reinstalling, press it firmly into place.


3 Align the Roller Mop with the end cap, push it in and press firmly until you hear a "click", indicating it is securely in place.

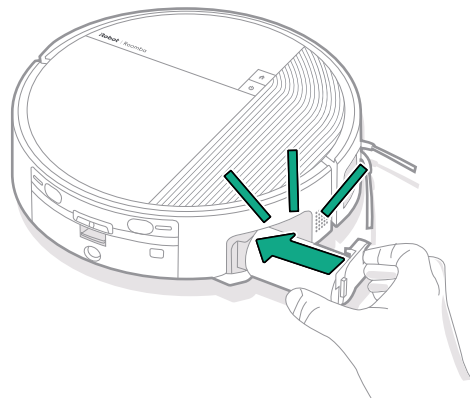


Note: When installing the Roller Mop, make sure the green release button on the End Cap is positioned at the upper right corner. Align the End Cap with the Robot, then push it horizontally inward until you hear a "click," indicating it is securely in place.

Clean the Roller Mop Scraper Groove


1 Press and hold the release button on the side, then slowly pull out the Roller Mop horizontally.

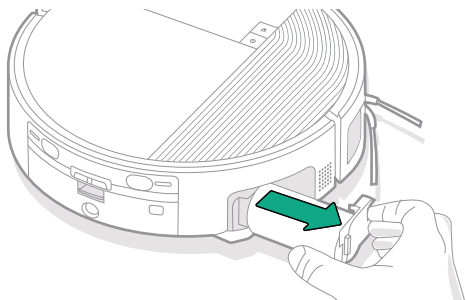


2 Flip the Robot over, push the left side of the Roller Mop Scraper Groove forward, and pull it out to the left.

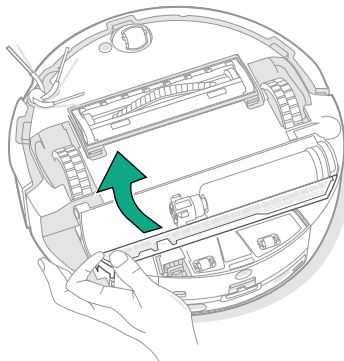

3 Rinse or wipe the Roller Mop Scraper Groove.

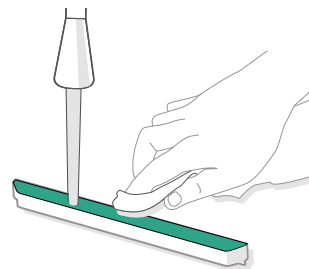

4 Align the Roller Mop Scraper Groove with the slot on the right, insert it, firmly press the left side backwards to secure it.

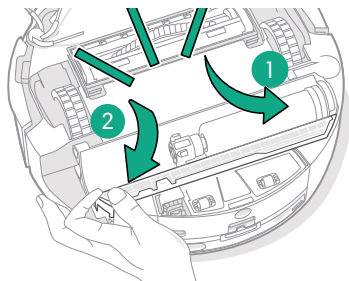

*** Important:** Ensure the Roller Mop Scraper Groove is properly installed. If it is not securely fastened, the Roller Mop will be difficult to reinstall.

Dock Care and Maintenance

To keep the Dock performing at its best, follow the procedures outlined on the following pages.


EN

Components	Maintenance Frequency	Replacement frequency*
Dock Charging Contacts	Monthly	-
Sensors	Clean monthly	-
Return-to-Dock signal emission area	Clean monthly	-
Cleaning Tray	Clean every 2 weeks or as needed	-
Clean Water Tank	Rinse and change the water as needed	-
Dirty Water Tank	Rinse and empty as needed	-
Ramp Plate	Clean monthly	-

* Replacement frequency may vary. Replace components if visible wear is present.

Clean the Dock Charging Contacts and Infrared Window


Check the components to ensure there is no debris. Wipe with a clean, dry cloth.

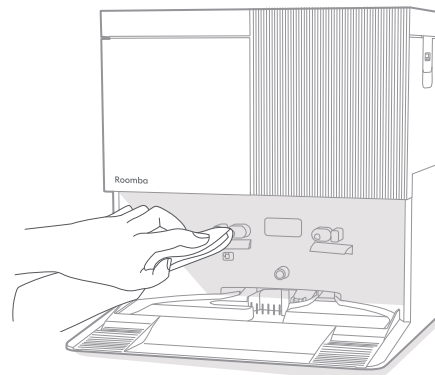

*** Important:** Do not spray cleaning solutions or water onto the sensors or sensor openings.

Clean the Cleaning Tray



- 1 Carefully wipe away debris in and around the Cleaning Tray with a clean, dry cloth. Ensure the Clean Water Fill Port and Dirty Water Suction Port are free from any obstructions. A mild soap and a sponge may be used to remove stubborn debris.

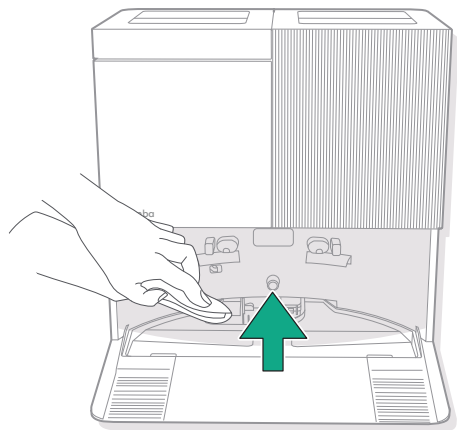

*** Important:** When wiping this area, take care not to push debris into the Dirty Water Suction Port or the Tray Float area.


Clean the Water Tanks

- 1 Remove the Clean Water Tank and the Dirty Water Tank.
- 2 Flip open the latches on the tanks to open them.

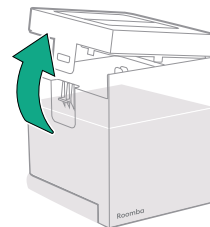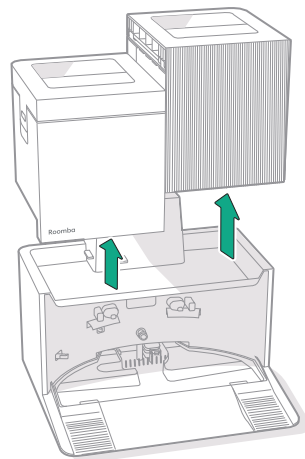


Clean the Water Tanks


- 3 Empty the Dirty Water Tank.

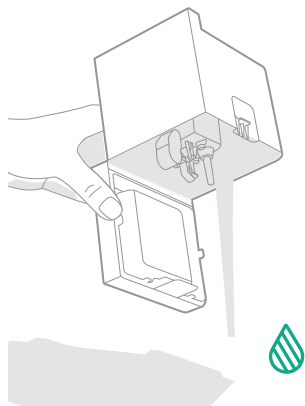


- 4 Rinse both tanks with room-temperature water. A sponge can be used to remove stubborn debris.

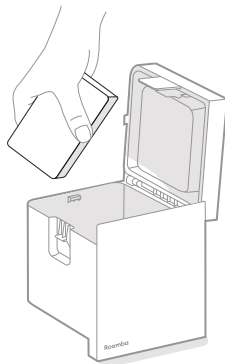

- 5 Refill the Clean Water Tank with clean water.

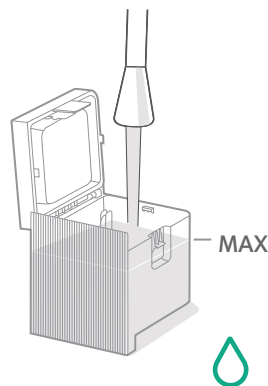

- 6 Install both tanks back into the Dock.

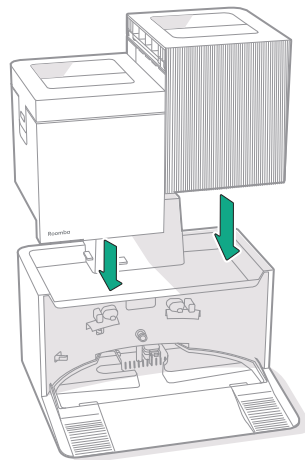

Important: Do not place the tanks in a dishwasher. Before reinstalling, ensure the tank latches are securely closed.

Troubleshooting

Error Indications	Solutions
Unable to power on	Battery is low. Please fully charge before use.
Unable to start: battery low	Please allow Robot to charge its battery sufficiently and try again
Could not reach its dock	Make sure the path is clear for Robot to return to its Dock. Check that the dock is plugged in and in its original location
Unusual noise during cleaning	The Main Brush, Side Brush, Left/Right Wheel, or roller mop may be tangled with foreign objects. Power off the Robot and clean.
Reduced cleaning performance or debris loss	Dirt Disposal Bag is full. Please replace. The Main Brush is tangled with foreign objects. Clean the Main Brush.
Robot offline	Poor Wi-Fi signal. Ensure the Robot is within good Wi-Fi coverage. Wi-Fi connection abnormal. Reset Wi-Fi and download the latest app, then try reconnecting.
Unable to charge	Ensure there is enough space around the Dock, and the Charging Contacts on the Dock are free of dust and obstructions. The ambient temperature is too low (below 0°C) or too high (above 40°C).

Error Indications	Solutions
Unable to connect to app	Ensure both the Dock and the Robot are within Wi-Fi coverage with a strong signal. Reset the Wi-Fi as instructed in the manual before pairing them again.
Unable to wash mop	The Dock's Clean Water Tank is out of water. Please refill with clean water. The clean water outlet is blocked. Please clear the blockage. Dock's Cleaning Tray full. Please clean the tray. Cleaning Tray not installed. Please install the cleaning tray. The Dirty Water Tank is full. Please empty it.
Mapping failed. Please remap.	For first-time mapping, place the Robot in the Dock and press the "Power" button on the Robot. The Robot will start mapping. Before mapping, open the doors of the rooms to be cleaned and clear any clutter from the floor. During mapping, do not move the Robot or the Dock, and keep children and pets away.
Main brush is stuck	Clear obstacles or tangled fibers from the brush so it can spin freely

Troubleshooting

Error Indications	Solutions
Side brush is stuck	Pull tangled fibers and debris from the side brush can spin freely.
Left Wheel stuck/Right Wheel stuck	Push Left/Right Wheel up and down a few times, then spin it to loosen trapped debris. It should spin freely.
Clean Cliff Sensors	Clean the bottom Cliff Sensors with a soft, dry cloth so stairs can be accurately detected. Place Robot on the floor and press the start button to resume cleaning.
Navigation and Obstacle Avoidance Module blocked, please wipe and continue	1. Navigation and Obstacle Avoidance Module is blocked. Please wipe away the blockage or foreign object; 2. If clearing is not needed, please move the Robot to a new location and restart.
The Robot is stuck	Move it to an open area and press the Power button to resume. Clear obstacles and open doors.
Unable to start: stuck in a Keep Out Zone	Move Robot out of the Keep Out Zone so it can start its new routine.
Unable to start: stairs or drop-off detected	Please move Robot to a new location and try again.

Error Indications	Solutions
Robot is suspended	The robot has detected that it is suspended in mid-air. Please move it to a new location and start again.
Battery too low to clean	Place Robot on its dock and allow it to charge sufficiently. You can check battery status here in the Robots tab
Cleaning Tray full. Please check the dirty water pipe and confirm the Dirty Water Tank is properly installed	First, check and empty the Dirty Water Tank, ensuring it is installed in place. Then clean out hair and other blockages from the Dock's Cleaning Filter and Suction Inlet.

Robot Specifications

Robot Sensor List

Name	Quantity	Function	Detection Range / Working Distance
Navigation and Obstacle Avoidance Module	x1	Localization, navigation & obstacle avoidance	Radar navigation 0.08 m-12 m Obstacle avoidance 0.05-0.32 m
IMU Gyroscope	x1	Motion control	/
Accelerometer	x1	Speed control	/
Side Single-line Laser Edge Sensor	x1	Edge cleaning	1.5cm-10cm
Ultrasonic Carpet Detection Sensor	x1	Carpet recognition	30mm
Front Bumper Sensor	x2	Collision protection	≤3mm
TOF Floor Detection Sensor	x1	Cliff detection	9cm
Infrared Floor Detection Sensor	x2	Cliff detection	9cm
Dirt Disposal Bag Detection Hall Sensor	x1	Detects if Dustbin is installed	≤1cm
Rear Return Infrared Sensor	x1	Return-to-Dock and pairing	2-2.2m
Dirty Water Bin Detection Hall Sensor	x1	Detects if Dirty Water Container is installed	≤1cm
Dirty Water Bin Full Detection Hall Sensor	x1	Detects if Dirty Water Container is full	<0.3mm

Dock Sensor List

Name	Quantity	Function	Detection Range / Working Distance
Clean Water Tank Detection Hall Sensor	x1	Detects if Clean Water Tank is installed or empty	≤1.5cm
Dirty Water Tank Detection Hall Sensor	x1	Detects if Dirty Water Tank is installed or full	≤1.5cm
Cleaning Tray Full Detection Hall Sensor	x1	Detects if Cleaning Tray is full	≤1.5cm
Cleaning Tray Detection Hall Sensor	x1	Detects if Cleaning Tray is installed	≤1.5cm

Robot

Product Name	Roomba® Plus 615 Combo Robot
Dimensions	354.5×354.5×99.8mm
Battery Capacity	Rated: 4800mAh Nominal: 5200mAh
Net Weight	~4.8kg

Wash Only Dock

Dock Dimensions	350×325×360mm
Base Station Net Weight	~4kg

Technical Support

Need further assistance? Please let us help you.

Please download the Roomba® Home app, or visit global.irobot.com for product support. You may also contact your local service center. If you are in the United States or Canada and need further assistance, please call the U.S. Customer Care team at (877) 855-8593.

iRobot® U.S. Customer Service Center Hours of Operation

Monday-Friday: 9:00 AM – 9:00 PM (EST)

Saturday-Sunday: 9:00 AM – 6:00 PM (EST)

Safety Information

Please refer to the safety guide included with this product, or visit global.irobot.com for more information.



©2026 iRobot Corporation. 8 Crosby Drive, Bedford, MA 01730 USA. All rights reserved. iRobot, Roomba, and PerfectEdge are registered trademarks of iRobot Corporation. AutoEmpty, AutoWash, StayClean, and PrecisionVision are trademarks of iRobot Corporation. Wi-Fi and the Wi-Fi logo are registered trademarks of Wi-Fi Alliance. Apple and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play is a trademark of Google LLC.