


Roomba® Max 710-719 Vac Robot + AutoEmpty™ Dock

Owner's Guide

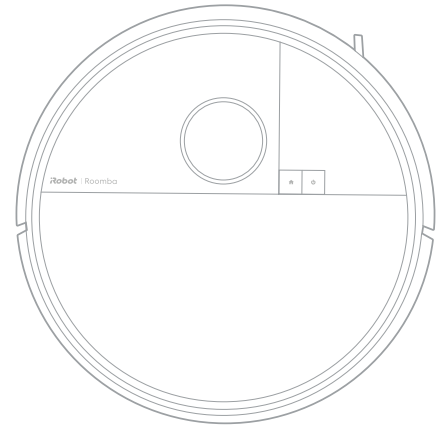

Getting Started

1

Download the Roomba® Home App



Scan the QR code with the camera on your mobile phone or find the Roomba® Home App in your app store.

The Roomba® Home App and a Wi-Fi® connection are required to complete set-up. The Roomba® Home App will guide you through steps to set up your robot.

Once your robot is set up, you can use the app to:

- Control when, where and how you clean
- Create automatic cleaning schedules
- Set custom cleaning preferences
- Unlock digital features
- Access tips, tricks and answers to commonly asked questions



NOTE:

2.4 or 5 GHz Wi-Fi® must be used.




IMPORTANT:


Read the safety information guide before using your robot.

2

Remove Protective Packaging

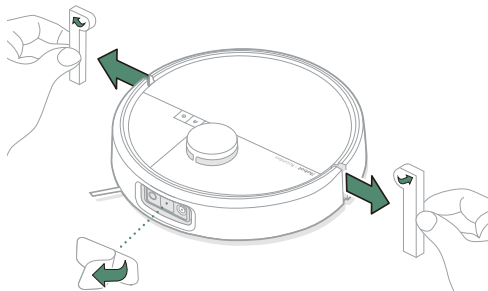


Remove protective film from ClearView™ LiDAR screen and foam inserts from behind the bumper.

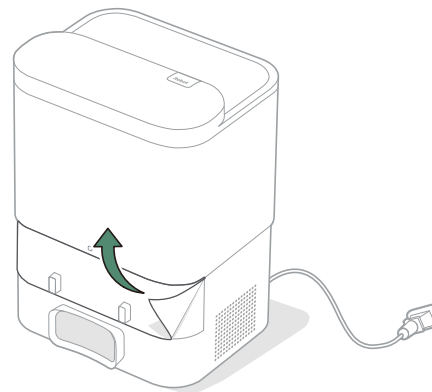

Remove protective film from IR Window.

3


Install the Edge-Sweeping Brush

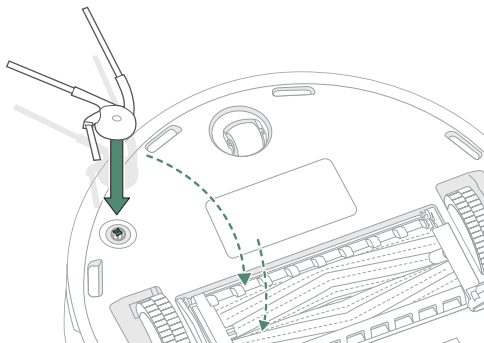

Align the Edge-Sweeping Brush and press down until you hear a click.

4

Place Your Dock

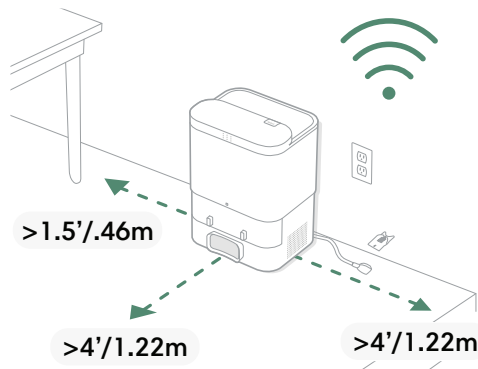

Place your dock on hard, level-surfaced flooring.



NOTE:

Do not place it in direct sunlight. Ensure the area around the dock is free of clutter to improve docking performance.




WARNING:

To prevent the risk of your robot falling down stairs, ensure that your dock is placed at least 4 feet (1.22 metres) away from stairs.

5


Plug in Your Dock

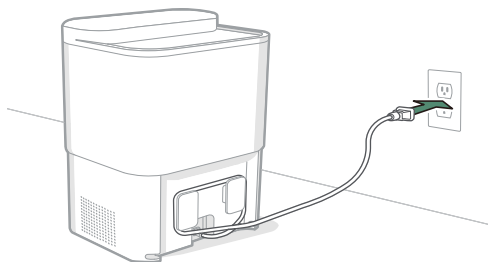

Plug the Mains Cable into the back of the dock, then into a wall socket. Wrap the cable on the back so it won't get in the way of the robot as it comes and goes.

6

Wake Up Your Robot

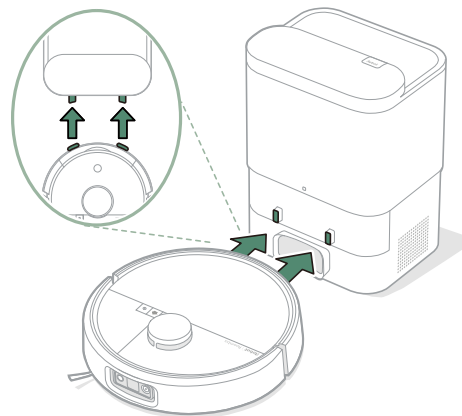


Place your robot in front of the dock, then slide it forwards until the metal Charging Contacts are aligned. Its lights will indicate that it's waking up. A sound will let you know it's fully awake.

NOTE:

Your robot comes with a partial charge, but we recommend letting it charge for 6 hours before creating a map of your home, as battery readings may be inaccurate for the first few days.


About your Roomba® Max 710-719 Vac Robot

Top View

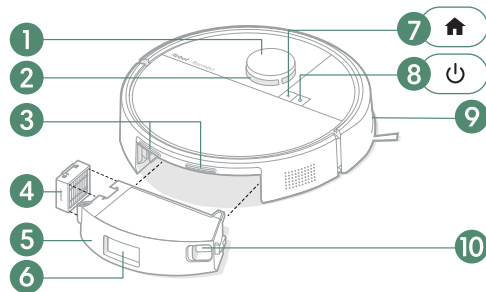

- | | |
|--------------------------|---------------------------|
| 1. LiDAR Detector Bumper | 6. Debris Evacuation Port |
| 2. ClearView™ Pro LiDAR | 7. Home Button |
| 3. Charging Contacts | 8. Power Button |
| 4. Filter | 9. Bumper |
| 5. Bin | 10. Bin Release Button |


Bottom View

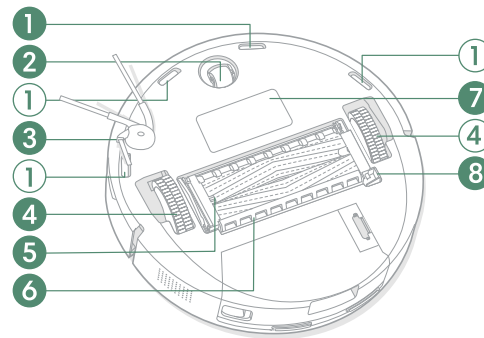

- | | |
|------------------------|---------------------------------|
| 1. Cliff Sensors | 5. Multi-Surface Rubber Brushes |
| 2. Castor Wheel | 6. Brush Cover |
| 3. Edge-Sweeping Brush | 7. Battery Pack |
| 4. Wheels | 8. Brush Cover Release |


About your AutoEmpty™ Dock

Front View

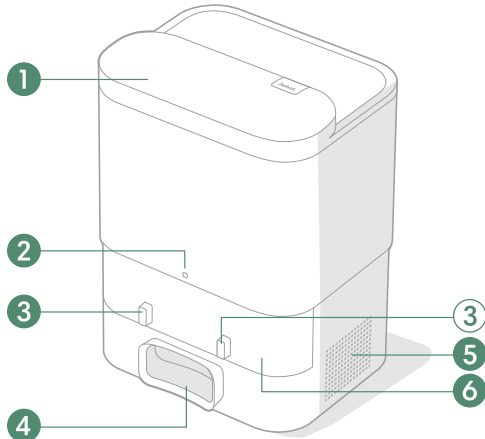


- 1. Dock Lid
- 2. LED Indicator
- 3. Charging Contacts
- 4. Debris Evacuation Port
- 5. IR Window

Rear View

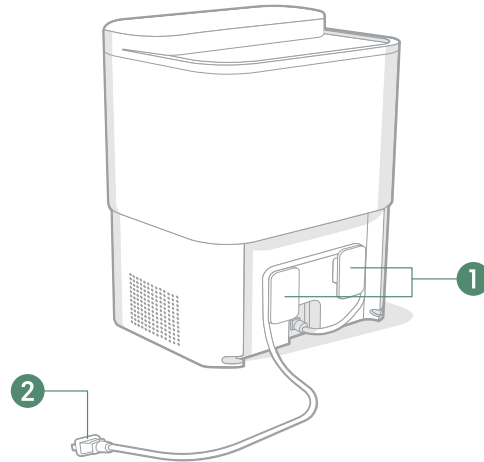

- 1. Cable Wrap
- 2. Mains Cable


Top View

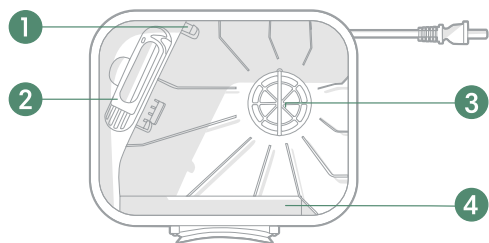

1. Bag Alignment Mechanisms - or - Bag Guide Rails
2. Cleaning Brush Accessory
3. Dock Filter
4. Dirt Disposal Bag Storage

Charging

Icon Indicators

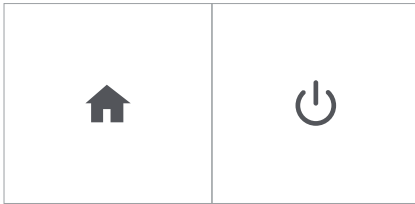

POWER and HOME Buttons

White: Fully charged on the dock / Standby, off the dock.

Flashing White: Returning to the dock to charge / Firmware upgrading.

Pulsing White: Charging / Powering On.

Flashing Red: Error / Low Battery.

Charging Your Robot

Your robot will return to the dock whenever it needs to recharge during a cleaning routine. Once it is sufficiently charged, it will then resume cleaning where it left off.

Standby Mode

Your robot uses a small amount of power whenever it is on the dock. You can put it in a further-reduced power state when not in use by pressing  for 10 seconds. To exit low power mode, short press .


NOTE:

Cleaning cannot be started from the mobile app while in low-power mode.

Storing Your Robot

For long-term storage, turn off your robot by removing it from the dock, then press and hold the  button and the bumper together for 10 seconds. Store it in a cool, dry place.

Dock LED Indicator

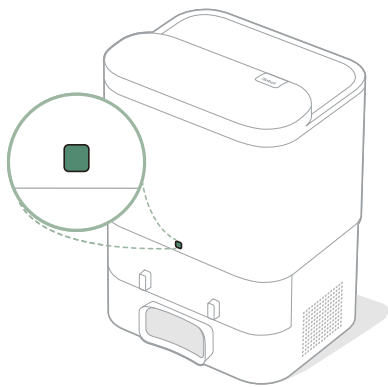

Solid White: Charging


Solid Red: Dust Bag full, missing, or improperly installed.

NOTE:

Software updates may adjust the actual LED behaviour on the robot and/or dock. Please visit global.irobot.com for the most up-to-date information.

Cleaning

Button Controls

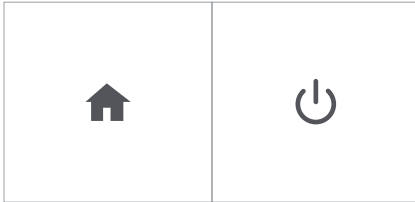

POWER

- Tap to Start / Pause / Resume Cleaning
- Hold for 3 seconds to turn on
- Hold for 10 seconds to turn off

HOME

- Tap to send the robot home
- Press to pause cleaning
- Press when paused to dock
- Press to stop docking

Cleaning Pattern

Your robot will automatically explore and clean your home. It will start by cleaning the perimeter of the room and then clean the remaining floor space in neat rows. It will return to the dock at the end of a cleaning routine and whenever it needs to recharge.

Tips:



- Remove excess clutter from floors before cleaning.
- Use your robot frequently to maintain well-conditioned floors.

After 90 minutes of inactivity off the dock, your robot will automatically end its cleaning. If you are unsure if it is finished or paused, visit the Roomba® Home App to check on its status.

NOTE:

It is highly recommended to use the Roomba® Home App for cleaning control. The mobile app can be used to clean specific rooms, set up cleaning routines, and create automations and schedules.

Spot Clean

You can Spot Clean from the Roomba® Home App or your robot.

Place your robot near the designated area you need Spot Cleaned. Tap  twice. Spot Clean will clean a 1.2m x 1.2m square around the robot twice in perpendicular directions. After Spot Clean is complete, your robot will end its cleaning routine. Press  to send it back to its dock.

Auto-Emptying

Your robot will automatically empty its Dust Bin at the end of each cleaning routine.




NOTE:

It is highly recommended to use the Roomba® Home App for cleaning control. The mobile app can be used to clean specific rooms, set up cleaning routines, and create automations and schedules.

Vacuuming

Initiate Vacuum Mode

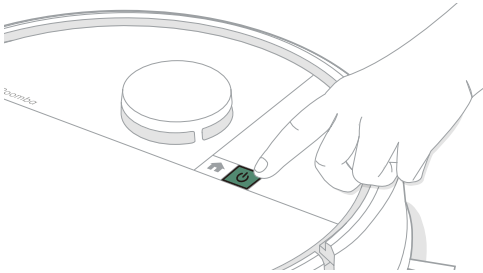

To vacuum, place the robot on the dock. Press  or use the Roomba® Home App to start your vacuum routine.

IMPORTANT:

It is recommended to clean the Dust Bin at least once a week. Otherwise, the performance of the vacuum may be reduced.

Care and Maintenance for your Robot


Maintain optimal performance and debris pick-up by regularly cleaning the parts in the chart below. If you notice your robot leaving debris behind, empty the bin and clean the filter and brushes.

View additional instructional videos in the Roomba® Home App.

Part	Care Frequency	Replacement ^a
Dust Bin	Empty and wash as needed	
Multi-Surface Brush	Clean 1/week	Every 6-12 months
Charging Contacts	Clean every 2 weeks or as needed	
Edge-Sweeping Brush	Clean every 2 weeks or as needed	Every 3-6 months
Filter	Clean 1/week (2/week with pet)	Every 3-6 months
Castor Wheel	Clean every 2 weeks or as needed	
Sensors	Clean 1/month or as needed	
Brush Cover	Inspect it every 6 months	Replace if worn or damaged

^aReplacement frequency may vary. Parts should be replaced if visible wear appears. If you think you need a replacement part, please contact iRobot® Customer Care for more information.

Cleaning the Edge-Sweeping Brush

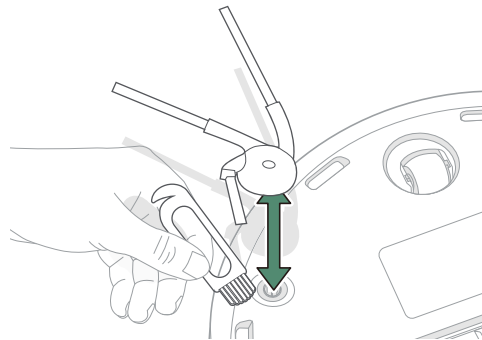

Pull Edge-Sweeping Brush to remove. Remove any hair or debris. Reinstall Edge-Sweeping Brush.




IMPORTANT:

It is recommended to replace the Edge-Sweeping Brush every 3-6 months to keep your robot cleaning at its best.


Cleaning the Multi-Surface Brushes

1

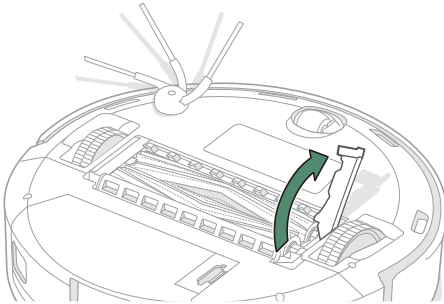


Press the Multi-Surface Brush Frame Release Tabs and lift to remove the brush frame.

2

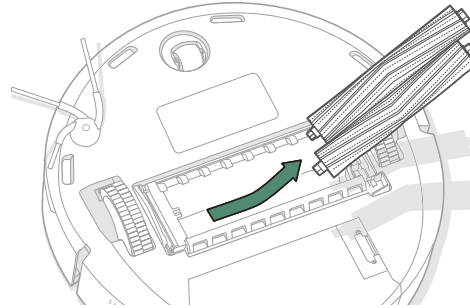


Remove the Multi-Surface Brushes.

3

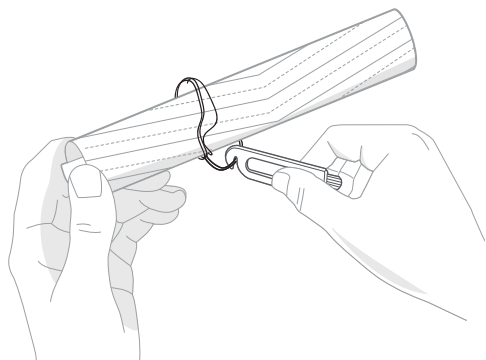


Remove any hair or debris.

4

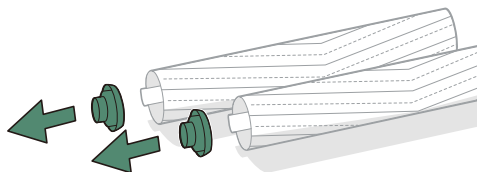


Remove the end caps from the ends of the brushes.

5

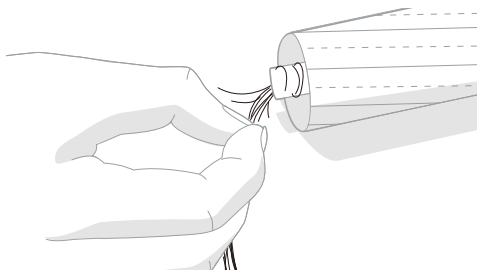

Remove any hair or debris that has collected beneath the caps.
Replace the end caps.

6

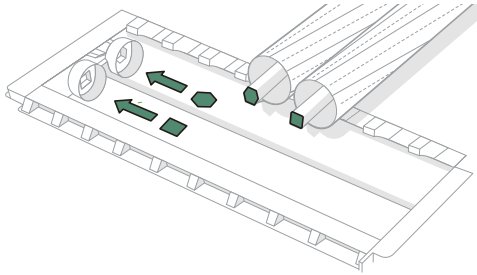

Reinstall the Multi-Surface Brushes and Brush Cover in the robot.




IMPORTANT:

It is recommended to replace Multi-Surface Brushes every 6-12 months for optimal cleaning performance.


Cleaning the Front Castor Wheel

1

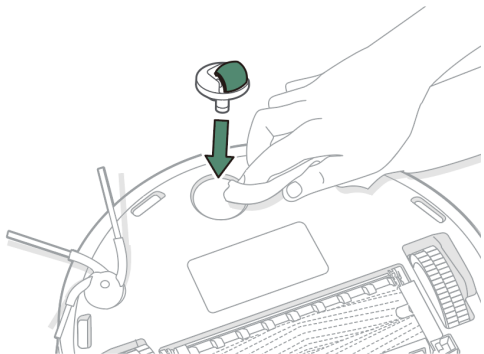

Remove hair and debris from the Front Castor Wheel.

2

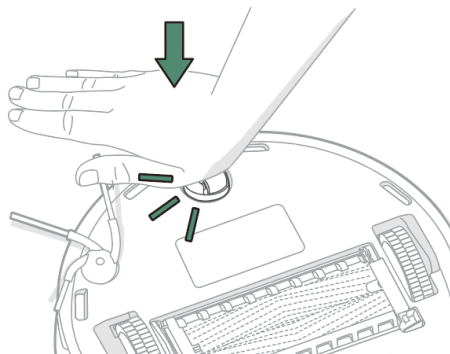

To reinsert the Castor Wheel, firmly press down with your palm until you hear a click.




IMPORTANT:

A front wheel clogged with hair and debris could result in damage to your floor. If the wheel does not spin freely after you have cleaned it, please contact Customer Care.


Cleaning the Charging Contacts and Sensors

Remove the robot from the dock and wipe the Charging Contacts and sensors with a clean, dry cloth or lightly dampened melamine foam.

CHARGING CONTACTS

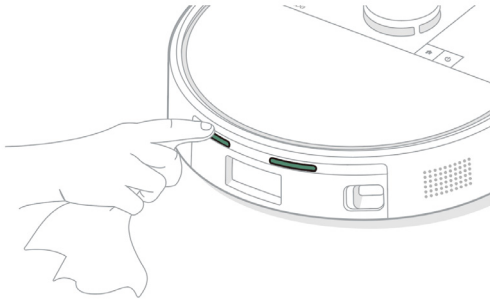

SENSORS

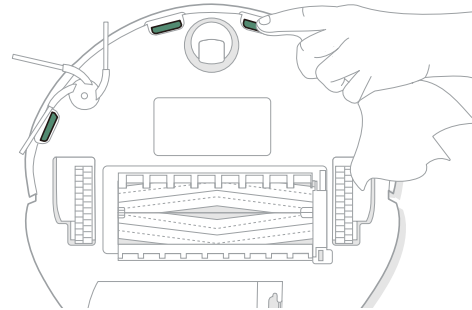


IMPORTANT:

Do not spray cleaning solution or water on the Sensors or Sensor openings.


Cleaning the Filter and Dust Bin

1

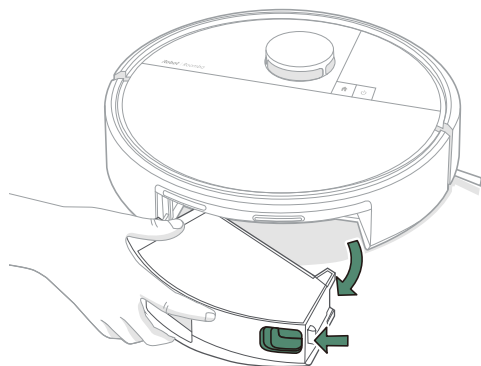


Press the Dust Bin Release Button and pull up to remove the Dust Bin.

2

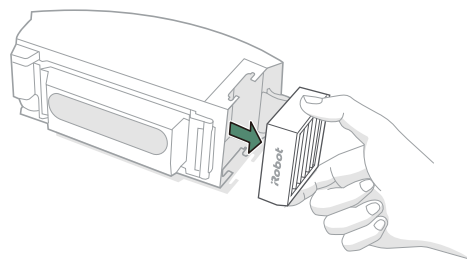

Remove the Filter Cartridge.

3

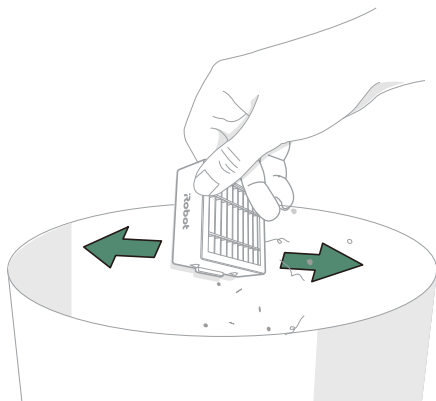


Remove debris by tapping the Filter Cartridge against the rubbish bin and/or cleaning with a clean cloth.

 NOTE:

To achieve optimal performance with your robot and dock, clean and/or replace your robot's filter as needed.

4

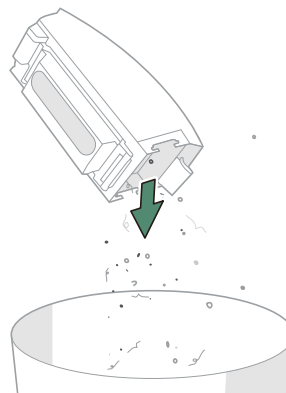


Empty the Dust Bin over a trash bin and clean with a cloth, or rinse using warm water.

 IMPORTANT:


Do not wash the filter. Remove the filter before washing the bin. The bin is not dishwasher-safe.

5

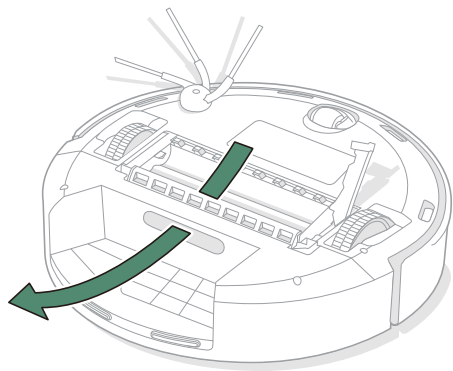


Clean debris from the vacuum path.

6

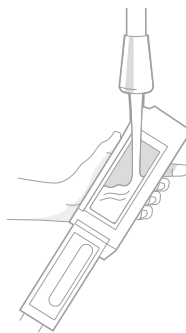


Rinse the Dust Bin using warm water.

7

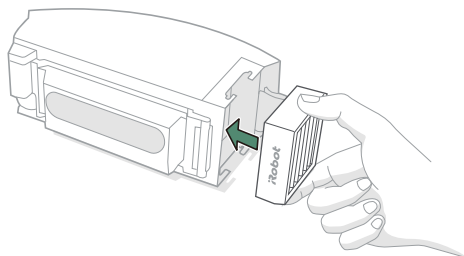

Ensure the bin is completely dry. Reinsert the filter Cartridge onto the Dust Bin.

8

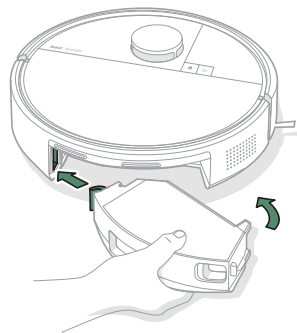

Place the Dust Bin back into the robot.


Care and Maintenance for your AutoEmpty™ Dock

To keep your AutoEmpty™ dock operating at optimal performance, perform the following care and maintenance tasks.

Part	Care Frequency	Replacement Frequency ^a
Charging Contacts	Clean once a month	
Sensors	Clean once a month	
IR Window	Clean once a month	
Dirt Disposal Bag		Bags should be replaced when full - prompted by the LED indicator on the dock and/or in the Roomba® Home App.
Dock Filter	Clean once a month	

^aReplacement frequency may vary. Parts should be replaced if visible wear appears. If you think you need a replacement part, please contact iRobot® Customer Care for more information.

Cleaning the Charging Contacts and IR Window

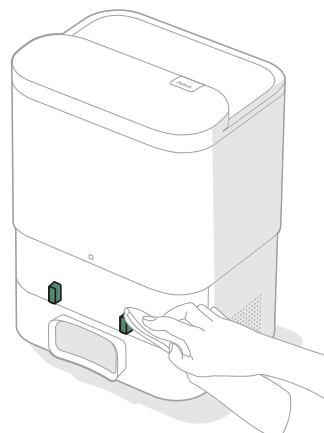


Unplug the dock. Inspect the components to make sure that they are clear of debris. Wipe with a clean, dry cloth.

IMPORTANT:

Do not spray cleaning solution or water on the sensors or Charging Contacts.


Replacing the Dirt Disposal Bag

1

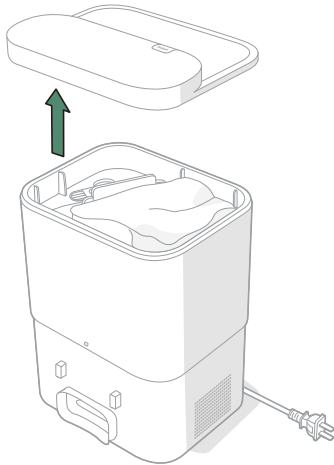


Lift the canister lid to open.

2

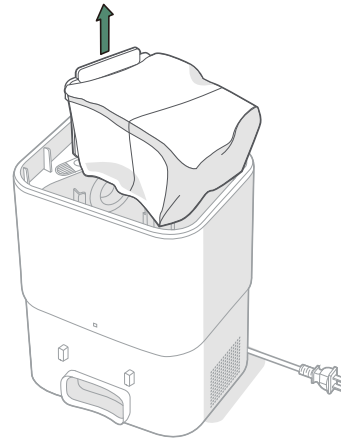


Pull up the card to remove the bag from the canister. This will seal the bag so that dust and debris cannot escape.

3

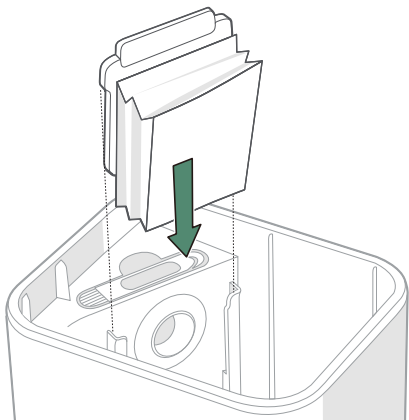


Install a new Dirt Disposal Bag by sliding the card into the guide rails.

4

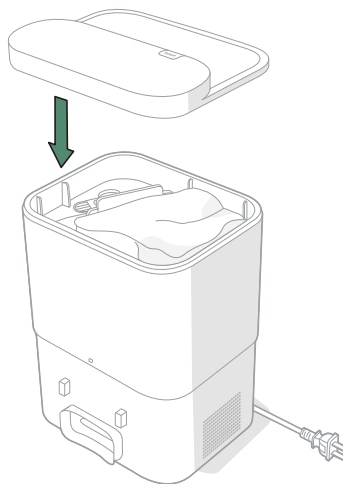

Press down on the lid, making sure that it is completely closed.

Removing Debris from the Dock Filter

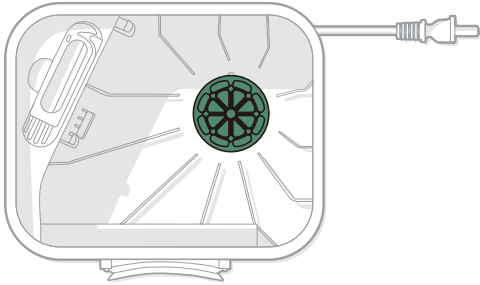

Inspect the blower cover for any lint or debris build-up, and wipe with a clean, dry cloth to remove debris.

Troubleshooting

Troubleshooting your Robot

Your robot will alert you if something is wrong with a voice announcement or audio alert. The Roomba® Home App will also provide notifications with steps to troubleshoot any issues.

If you are unsure if the robot is finished or paused, consult the Roomba® Home App to check its status.

Factory Reset

To factory reset, press  for 5 seconds, don't release, and then (within 5 seconds) press  +  for 5 seconds.

Battery Safety and Shipping

- The battery **MUST** be turned off before shipping.
- To turn off the battery, remove the robot from the dock. Push in its bumper and hold it in that position while you press and hold the  button for 10 seconds, or until the lights turn off.
- Package the robot securely for shipping.

WARNING:

Lithium-ion batteries and products that contain lithium-ion batteries are subject to stringent transportation regulations. If you need to ship this product for service, travel or any other reason, you **MUST** follow the shipping instructions below.

If you need further assistance, please visit your Roomba® Home App, contact iRobot® Customer Care or visit global.irobot.com

Troubleshooting your AutoEmpty™ Dock

Your AutoEmpty™ Dock will tell you if something is wrong via an LED indicator on the front of the canister and through the Roomba® Home App. If the dock is not performing as expected, check the Roomba® Home App for troubleshooting steps.

LED Indicator	Common Error	How to Fix
Solid Red	Bag full or missing	Replace the bag if it is full or missing. Make sure that the bag is securely inserted. If the problem persists, remove any debris from the port on the back of your robot and the front of the AutoEmpty™ dock.

NOTE:

This product has been equipped with a thermal protector designed to protect against damage due to overheating. If the protector operates, the motor will stop running. If this happens, unplug the unit, allow it to cool for 30 minutes, clear any obstructions from the evacuation port and evacuation tube, then plug the unit back in.

unplug the unit, allow it to cool for 30 minutes, clear any obstructions from the evacuation port and evacuation tube, then plug the unit back in.

Need further assistance? We're here to help.

Download the Roomba® Home App or visit global.irobot.com for product support or to contact your local support centre. If you need further assistance in the US & Canada, call the US Customer Care team at +1 (877) 855 8593.

iRobot® USA Customer Care hours

Monday to Friday, 9 AM–9 PM Eastern Time

Saturday and Sunday, 9 AM–6 PM Eastern Time

Safety information

Please see the safety guide that came with your robot, or visit global.irobot.com



©2026 iRobot Corporation. 8 Crosby Drive, Bedford, MA 01730, USA. All rights reserved. iRobot and Roomba are registered trademarks of iRobot Corporation. PerfectEdge, AutoEmpty, AutoWash, StayClean and PrecisionVision are trademarks of iRobot Corporation. Wi-Fi and the Wi-Fi logo are registered trademarks of Wi-Fi Alliance. Apple and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play is a trademark of Google LLC.